

WOODMASTER FORCE 30

Retain this manual

WOODMASTER® PELLET FURNACE



POWERED BY THE RENOVATOR PELLET BURNER

www.woodmaster.com / 800-932-3629 / Manual PN: 7994-805

Northwest Manufacturing, Inc / 600 Polk Ave SW / Red Lake Falls, MN 56750

Rev:2.6/Software V20



TABLE OF CONTENTS

Table of Contents.....	2
Safety	3-4
Technical Features	5
Fuels	6
Installation	7-21
Operation.....	22-25
Maintenance	26-31
Troubleshooting	32-33
Wiring Diagram	34-35
Specifications	36
Warranty	37-40
Terms	41
Notes	42-43

Thank you for purchasing the Force 30 furnace from WoodMaster. This product was designed to deliver easy, trouble free operation for years to come. Check out other WoodMaster heating products at www.woodmaster.com, or our line of quality pellet grills at www.woodmasterpelletgrills.com.



SAFETY



- *Read and follow these directions carefully. Retain this manual for as long as you own your furnace.*
- *All installation and operations must follow STATE and LOCAL CODES for wiring, and firing of this unit. These CODES may differ from this manual. Installation must be performed by a qualified installer.*
- *Follow the manual carefully. Follow the recommended cleaning and maintenance.*
- *Never open the access doors during operation!*
- *Never operate any part of the furnace or system with covers, shields or panels removed.*
- *Anyone who is not familiar with and/or has not been trained to operate the furnace may not operate the system. Only responsible adults should operate your furnace. If the furnace is not fired properly damage could result and the warranty may be voided.*
- *Never allow children to play near or tamper with the furnace, fuels/fuel tank or any other part of the system.*
- *Always keep the area around and in front of the furnace clean and free from combustible materials.*
- *Keep animals away from the furnace.*
- *The operation may not be continued or restarted in the event of visible damages (for example, thermal distortion, traces of smoke or fire, mechanical damages, etc.). Any damages must be repaired. In the event of any doubts, please contact your authorized WoodMaster Dealer.*
- *The furnace system must not be exposed to external mechanical stress (for example, as storage, climbing support, brace, or similar). This also applies for single parts (doors, covers, etc.).*
- *During operation only touch the PLC Temperatures at other points (for example, chimney, access doors, ducting...) can be very high.*
- *The Force 30 must be operated exclusively according to the guidelines for planning, assembly, regulations, statutes and product related instructions. The manufacturer is not liable for damages and their results, if they occurred due to improper assembly, operation, application and also inadequate maintenance and cleaning.*
- *Do not connect this unit to a chimney flue serving another appliance. Follow all state/local codes.*
- *Ensure that the burner is inserted to the maximum depth of the furnace. Check this each time the burner is removed for cleaning or servicing.*
- *After installation the exhaust must be tested with an O2 sensor from dealer for a flue gas analysis.*

Sweeping

The chimney should be inspected and cleaned as needed, typically twice a year. This is to be done by qualified persons. Regular cleaning of heating surface of the furnace will help the furnace operate at the highest possible efficiency. Shut off furnace, disconnect power and allow the furnace to cool before attempting to clean the furnace.

Warning!

Always disconnect the power to the furnace before any cleaning or maintenance.

Service agreements increases operation length and life of the unit. For more information contact your local WoodMaster dealer.


Replacement parts should only be genuine Northwest Manufacturing, Inc. components. Your WoodMaster dealer can supply the genuine service parts and install them. They can then reevaluate the system and provide a flue gas analysis. Failure to perform a flue gas analysis may void your warranty.

Emission Standards


Visit the EPA Burnwise website, <http://www.epa.gov/burnwise/index.html> for information on wood fuel fired appliances, as well as a list of approved appliances.

Safety Standards

Guardian info: Solid Fuel Burner System. Listed by Guardian Fire Testing Laboratories Inc. Tested and listed to THE Applicable Sections of UL-391, ETLM 78-1, ASTM-E 1509 & CAN/CSA-B366.1 EPA EXEMPT PER 40CFR60.53A, METHOD 28A

SOLID FUEL BURNER SYSTEM			
Listed By: GUARDIAN FIRE TESTING LABORATORIES, INC.			
Make/Model:	Force	Serial No.:	
Production Date Code:			
Manufacturer:	Northwest Mfg., Inc. WoodMaster		
Test Date:	09/27/2011	Electrical Rating:	6A, 120V, 60HZ
	Burner:	WOOD PELLETS, 10% MAXIMUM MOISTURE CONTENT. LESS THAN 1% ASH CONTENT	
Tested and Listed to THE Applicable Sctions of UL-391, ETLM 78-1, ASTM-E-1509 & CAN/CSA-B366.1 / EPA EXEMPT PER 40CFR60.53A, METHOD 28A			

TECHNICAL FEATURES

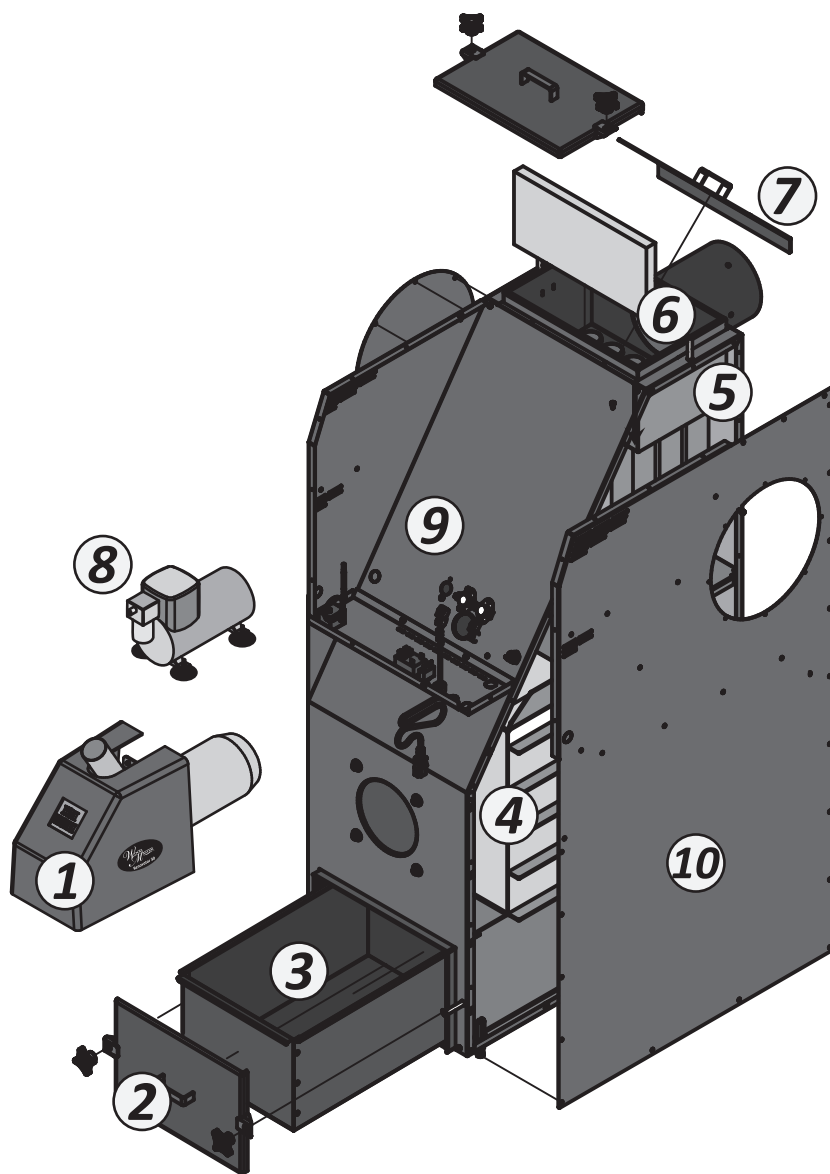

1. High Efficiency Renovator 30kW burner
2. Easy access ash door in front
3. Large ash box - holds approx. 1-2 weeks of ash
4. High efficiency louvered fire box transfers the maximum amount of heat to the air chamber
5. Triple Pass flue tube insures the heat stays in your home and not out the stack (6")
6. Easy access flue tube clean out door
7. Flue tube diverting plate
8. On board air supply to auto clean the Renovator (Optional accessory)
9. One central electrical location for ease of wiring
10. High quality and attractive outer shell

All wood pellets must conform to certain quality standards to ensure trouble free operation of the burner.

Use of unapproved fuels will result in faulty operation and a voided warranty. Never use the following: trash, household garbage, plastics, gasoline, rubber, naphtha, leaves and materials treated with petroleum products (ie: particleboard, railroad ties & pressure treated wood). Paper products should not be used.

Please contact your Northwest Manufacturing or your WoodMaster for any questions on fuel use.

Pellet Specifications

Only premium wood pellets certified by the Pellet Fuels Institute may be used and must follow these guidelines:

- Bulk density per cubic foot must be a minimum of 40 pounds
- The diameter is between 1/4 inch to 5/16 inch
- Maximum length is 1.5 inches
- Fines (dust) of not more than 0.5% by weight
- Sodium content shall be less than 300 parts per million
- Ash content of 1% or less
- Moisture content of 10% or less

Note: Pellets should be stored in a dry area and should not be allowed to get wet.
Handle pellets with care.

Note: Each time you change brand/quality of pellets you may also have to change the start dose and feed rate of the burner.

INSTALLATION



Your WoodMaster Force 30 must be installed by a professional and should follow all local, state and federal laws and regulations. Any use of an unapproved installation may result in a voided warranty.

It is recommended to have your installation approved by WoodMaster. The Owner/Operator is responsible for operating the furnace in a manner that does not create a nuisance condition. WoodMaster requirements, state and local laws may not be sufficient in all conditions to prevent nuisance conditions due to factors that vary at each location. Please plan your system accordingly.


Location

Your Force 30 can only be installed indoors. Ensure that the floor that the furnace is to be placed is level and able to support the weight of the furnace plus the additional weight of the fuel. Ensure the feet are in the bottom of the furnace. Adjust the feet so the furnace sits level and the feet are loaded evenly.

There should be ample room around your furnace to make loading and cleaning of your furnace easier. This area should also be clear of any easily combustible materials. Minimum clearance requirements are 42 inches for the top, 18 inches for the sides, 24 inches for the back and 36 inches for the front of the burner when installed, with more space recommended at the front of the furnace to allow for more space when cleaning. Make sure to leave ample space on either side of the furnace for the hopper.

The room where the furnace is placed should allow ample venting to ensure proper air flow to the burner. A minimum vent size of 31 square inches recommended.


Below are the dimensions for the WoodMaster Force 30 without the burner installed. The burner will extend approximately 16 inches from the mounting flange on the furnace. These dimensions are approximate. All dimensions are in inches.

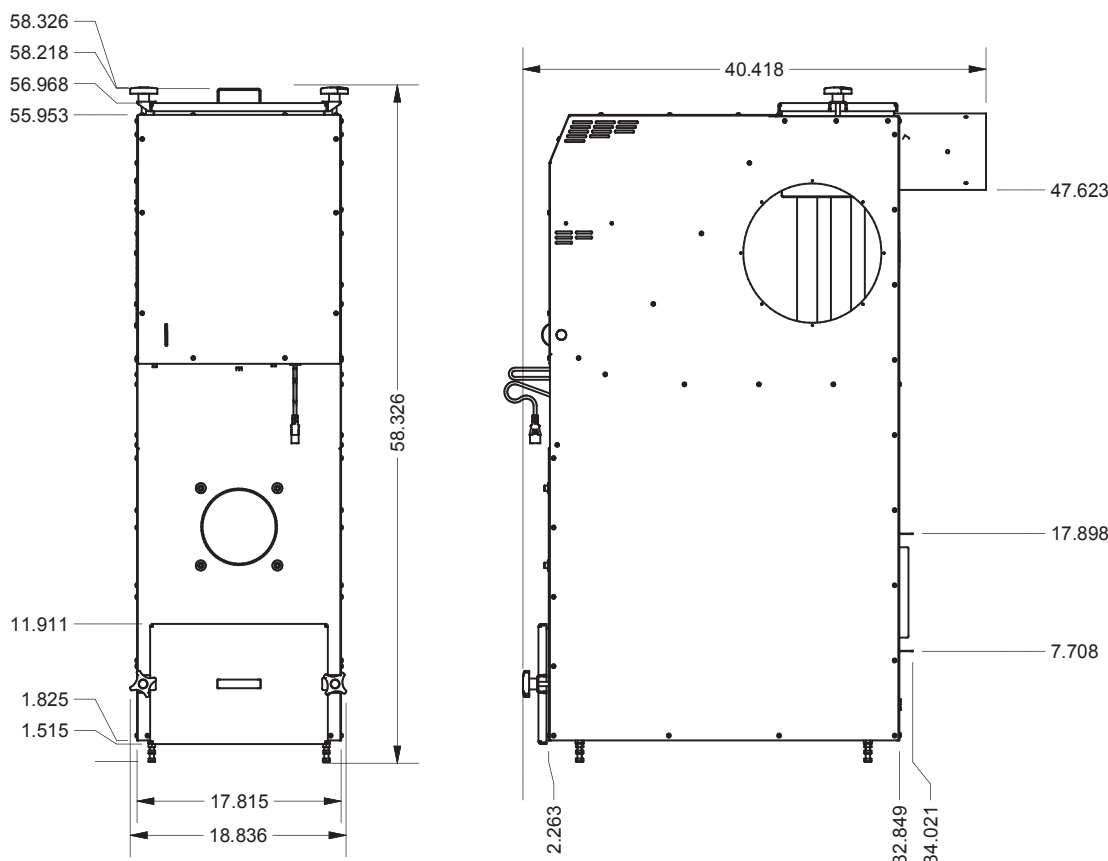


Renovator Pellet Burner Installation Furnace Installation

NOTE: The wire brush used for cleaning is shipped inside one of the furnace tubes. Remove the flue tube clean out door on the top of the furnace and remove the brush prior to installation.


Attach the tipping chute to the burner in the desired angle with the supplied screws. Remove the four thumb screws that hold the cover on the burner and remove the cover.

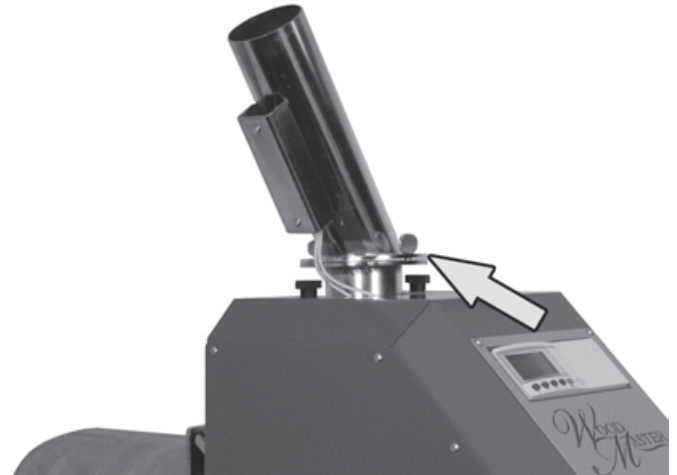

Remove the four screws that secure the mounting bracket to the burner. Remove the mounting bracket.

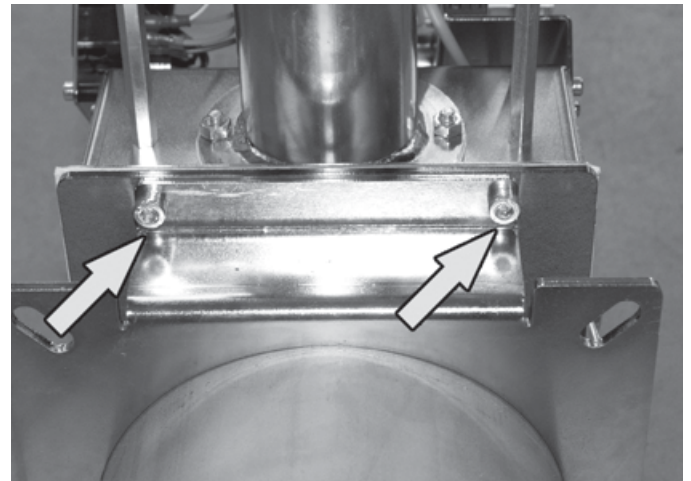


Place a gasket material, i.e. fiberglass rope, around the burner connection hole as shown. Note: Some models will have a gasket attached to the mounting bracket from the factory. Skip this step if your bracket has the gasket installed.

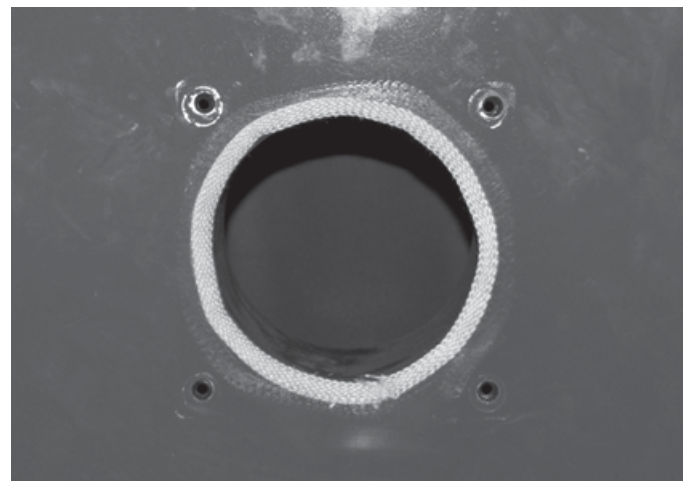


INSTALLATION




Fasten the mounting bracket to the furnace with the supplied hardware. Do not tighten at this time.

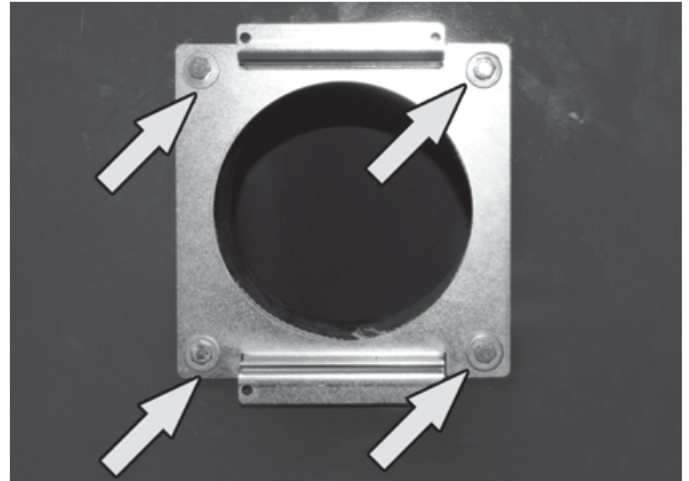


Slide the burner into the mounting bracket.

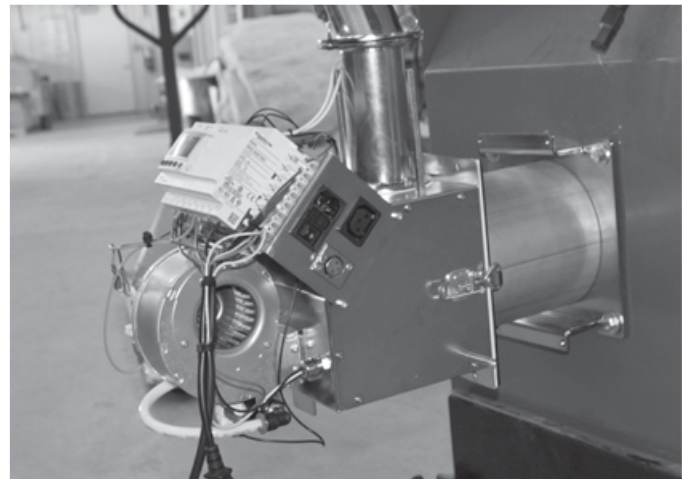

Secure the burner to the mounting bracket.

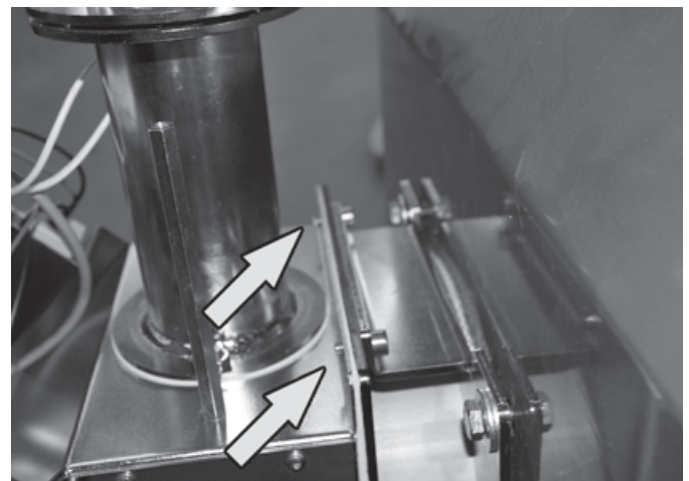

Tighten the bolts that secure the mounting plate to the furnace.

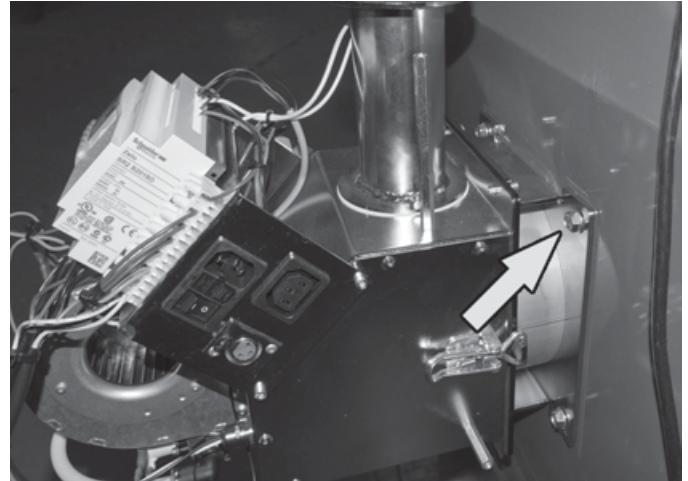


Connect the wires to the burner. The Renovator Pellet Burners have very simple connections that allow for easier removal for cleaning and maintenance.

- A. Power Switch
- B. Fuse (Replacement P/N: 011-0009)
- C. Power Lead In
- D. To Feed Auger
- E. To Temperature Sensor (not used if thermostat kit 720-0006 is to be used.)

Not shown here: Draft controller connections and the air compressor connections.

The protective cover on the burner cannot be removed without disconnecting these cables.

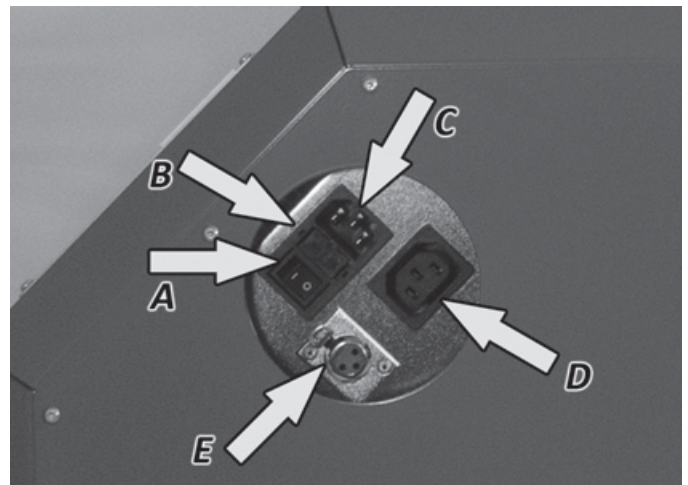

INSTALLATION



Feed Auger Installation


The angle of the auger should be between 43 and 45 degrees. The feed auger has to be properly supported. The auger can be hung from the ceiling or overhead support with a chain. The feed auger should be placed so that it does not sit right above the tipping chute on the burner. This helps reduce potential damage in the event of a burn back. Fill the feed auger with pellets before you connect the tube to the burner. Connect cable of the auger with the power cable for the burner and run it manually until pellets have been fed out from the auger for about 15 minutes. We recommend that you run the auger a couple of times manually for 70 second intervals and then weight each dose to see if the auger gives an even feeding. The margin of error should only be within 3-4 %. In 70 seconds the auger loads approx. 150 grams or 5.25 ounces, which is the recommended start dose. Insert the auger tube into the tipping chute when complete.

Feed Auger Assembly


The following instructions describe how to assemble the feed auger out of the supplied parts. The auger pipe is 51" in length and the spiral is 65.75". No modifications to the length of the components can be made.

Attach the auger spiral to the motors output shaft. Push the spiral as far as it can go onto the shaft, then pull it back approx. 3/8" to prevent binding. Clamp the spiral in place by tightening the two bolts that hold the clamp in place.


Note: The auger head may have a slightly different appearance than the one shown in the pictures. Assembly of the auger will not change.

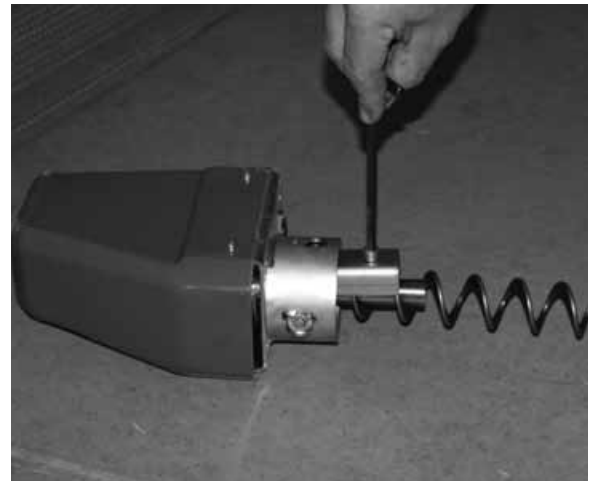


Slide the T-pipe onto the auger tube and fasten them together using the screw indicated by the arrow.

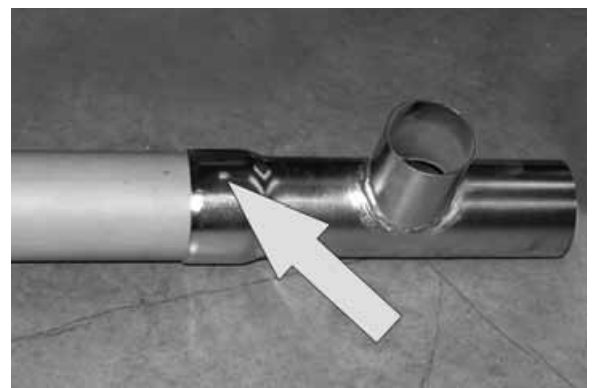


Route the auger spiral through the T-pipe and slide the auger motor over the other end of the T-pipe.

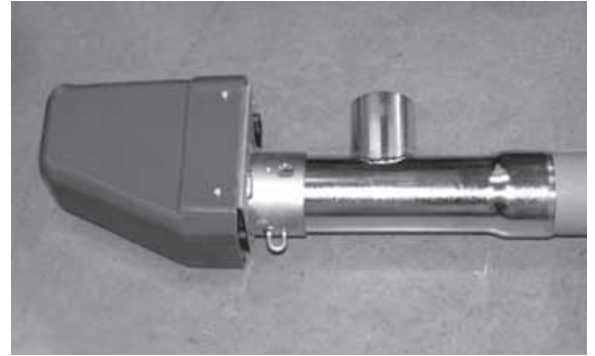


Fasten the motor to the T-pipe. Make sure that the T-pipe and the wire connection on the motor point in the same direction.

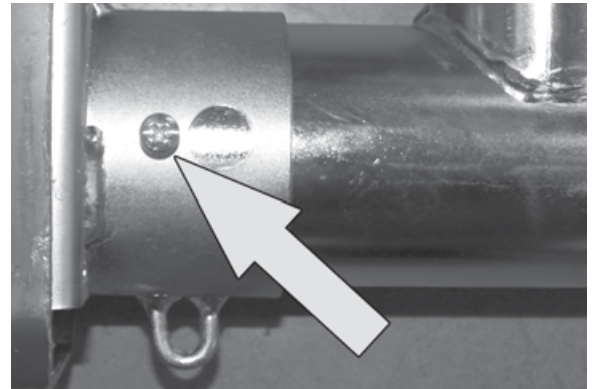

Slide the inlet pipe over the auger tube. The hole in the inlet pipe should be 180 degrees towards the outlet on the T-pipe.

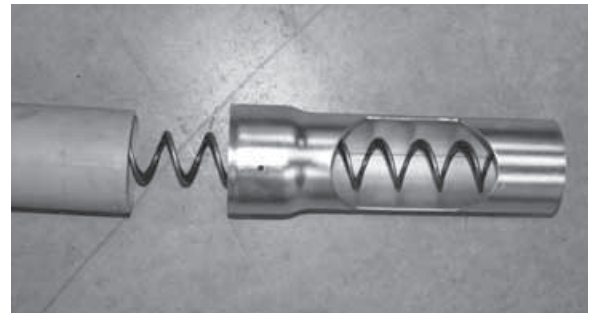

Slide the inlet pipe over the auger tube. The hole in the inlet pipe should be 180 degrees towards the outlet on the T-pipe. Fasten the screw shown to lock the inlet pipe in place.

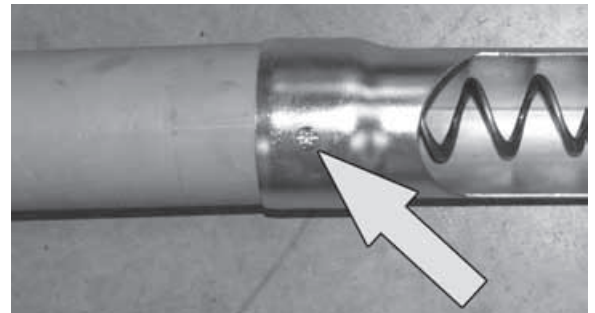

Slide the blue tube to the outlet of the T-pipe, and the cap on the end of the inlet pipe. The auger is now ready to be installed.



INSTALLATION



Pellet Hopper Assembly





The optional pellet hopper holds approximately 280 pounds of pellets. Northwest Manufacturing, Inc. recommends using our pellet hopper to ensure proper fuel flow. Each part is numbered on the chart on the next page for reference.



Install the adjustable feet into each of the four legs of the hopper.

Assemble the four side walls out of side skins 12 and 10. Use the hopper side seam 11 to join the skins together using the provided screws.


Join the assembled side walls to the legs using the supplied screws. The legs will be on the inside of the hopper, with the skins screwed to the outside.

Place the lid of the hopper on the hopper when assembly is complete. DO NOT remove during operation.

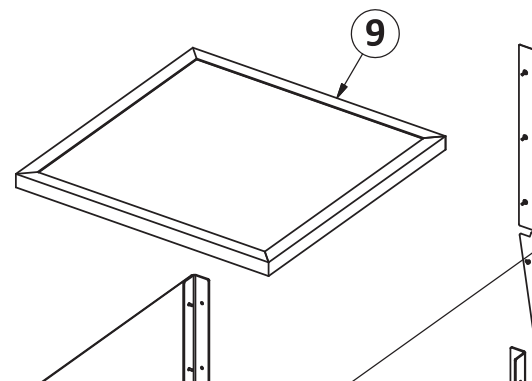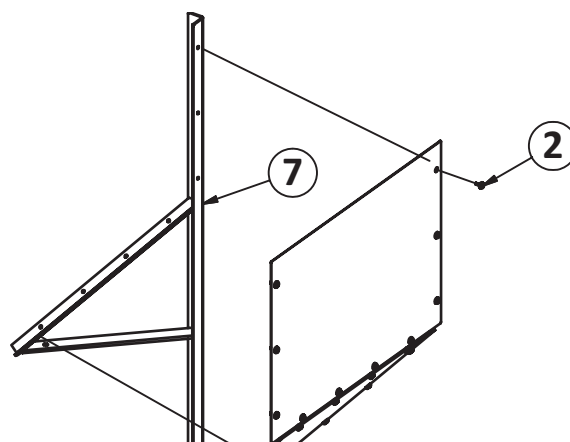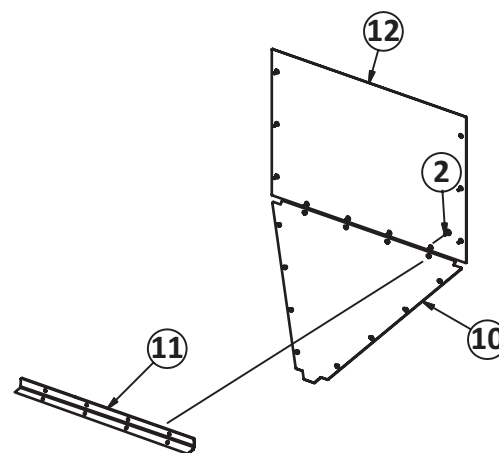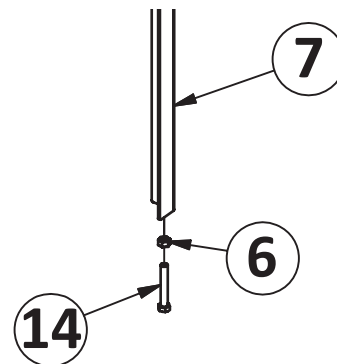

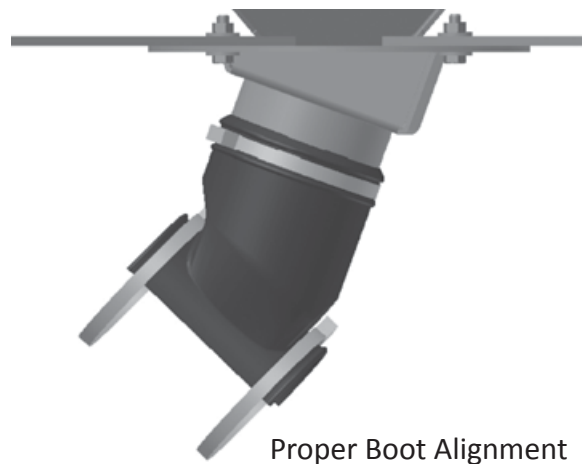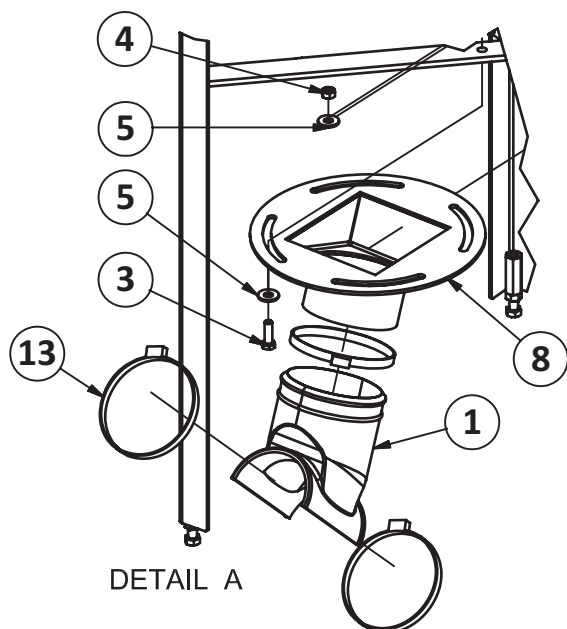

Once the hopper is assembled put it in place next to the furnace. The bottom is adjustable to allow for easy installation of the auger tube. Assemble the bottom by securing the hopper boot to the adjustable bottom with a hose clamp. Using the provided bolts and washers secure the bottom to the braces on the legs, do not tighten the bolts until the auger is in place to allow for adjustments.

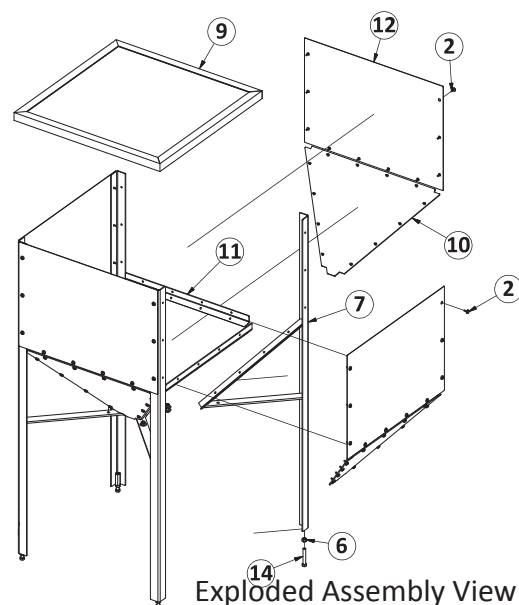

ITEM	PART NUMBER	QTY	DESCRIPTION
1	0409-212	1	AFS9 HOPPER BOOT
2	0219-948	88	SCREW: 1/4-20 x 1/2" PPH THREAD ROLLING, Z
3	0219-265	4	SCREW: 5/16-18 x 1, HHCS, Gr5, Z
4	0219-001	4	NUT: 5/16-18, HEX, Z
5	0219-041	8	WASHER: 5/16" USS FLAT, Z
6	0219-002	4	NUT: 3/8-16, HEX, Z
7	980-0081	4	PTD: 4' HOPPER LEG WMT
8	980-0082	1	PTD: HOPPER ADJUSTABLE BOTTOM WMT
9	980-0083	1	PTD: HOPPER LID WMT
10	910-0285	4	PTD: HOPPER FUNNEL SIDE SKIN
11	910-0286	4	PTD: HOPPER SIDE SEAM
12	910-0287	4	PTD: HOPPER SIDE SKIN
13	0209-250	3	HOSE CLAMP, Ideal # 6872
14	210-0010	4	BOLT: 3/8-16X2.5; HH, FULL THREAD

INSTALLATION



Poly Pellet Hopper Assembly

The optional pellet hopper holds approximately 280 pounds of pellets. Northwest Manufacturing, Inc. recommends using our pellet hopper to ensure proper fuel flow and to protect the pellets from the elements.

Lay the hopper's main body on its side and attach the legs by inserting the bolts and securing them on the inside of the hopper body with the supplied hardware.



Stand the side hopper upright. Attach the leg supports ensuring that the longer of the three supports is on the side of the hopper that faces the boiler.

Note: Install the supports on the inside of the legs, securing the supports to the legs with the "U" bolts. DO NOT TIGHTEN THE "U" BOLTS AT THIS TIME!



Attach the boot to the bottom of the side hopper. Do not tighten the clamp on the boot at this time.



Put the top on the hopper by securing the hopper top to the side hopper with the screws (6) provided. Place the hopper in its location next to your Ultra Series boiler.



Secure the boot to the intake auger tube with the clamps provided. Apply the bottom boot to the end of the intake auger tube and secure it with the clamp. Tighten the clamp on the boot to secure it to the side hopper. Apply a bead of silicon between on the auger tube next to the inlet pipe and boiler panel to seal out water and snow.



Raise the leg supports to a point just below the intake auger tube. Tighten the "u" bolts on the leg supports to secure the legs to the leg supports.




INSTALLATION




On Board Air Cleaner Installation

The Renovator Pellet Burner has the capability to clean the fire pot with compressed air supplied by an on board air compressor. This allows for easier ignition as well as lower maintenance. Below is a brief explanation of the installation process. **NOTE: Disconnect all power during installation.**


Disconnect the wiring and remove the cover of the burner. **Note: The burner does not need to be removed from the boiler to perform this installation, the burner is shown off the boiler for reference only.** The location of the air line connector is below the combustion fan on the left side. Connect the supplied air hose to the air line connector on the burner.

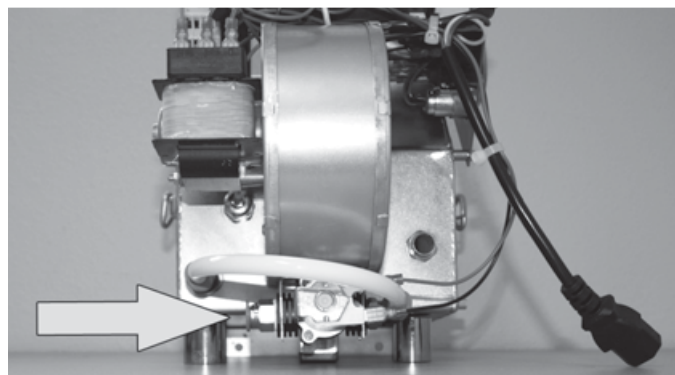

Unpack the air compressor. Connect the air hose to the air compressor via the quick connect. Make sure the air compressors power switch is left in the “on” position. **NOTE: Do not modify the length of the air hose.**

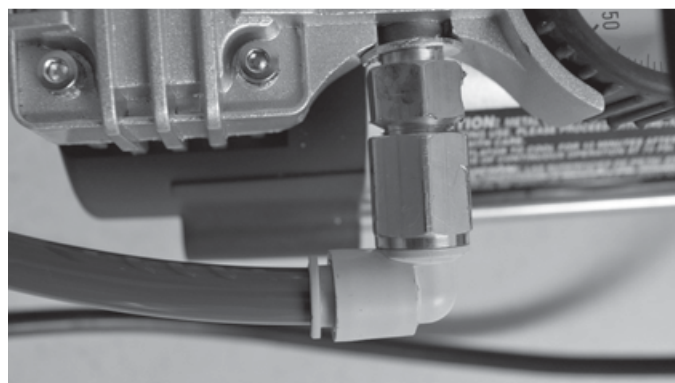

Plug the supplied air compressor power cord adaptor into the burner. Plug the air compressor power cord into the adaptor. Replace the burner cover. Place the air compressor next to the furnace, making sure the air line and power cord are clear of the ash door and other heat sources.

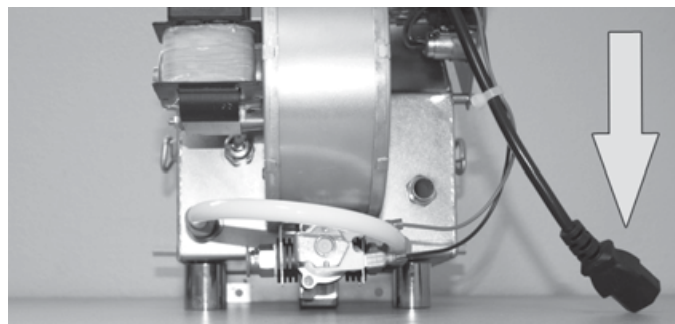


If you do not wish to use the on board air cleaner, you still need to supply compressed air to the burner for cleaning. Northwest Manufacturing, Inc. offers an adapter (Part Number: 0020-213) that will allow you to connect the air hose to a full size air compressor. Whenever the boiler is operational there needs to be a constant supply of compressed air of 80-90 psi available to the burner.


Filter Box Assembly

The filter box is assembled by snapping the panels together. The filter box is attached to the Force 30 with an adapter plate. Secure the plate to the furnace before installing the fan and filter box. **CAUTION: Edges of the filter box panels are sharp!**


Fasten the end panel with the two side panels. Make sure the tabs on the end panels are pointed towards each other.

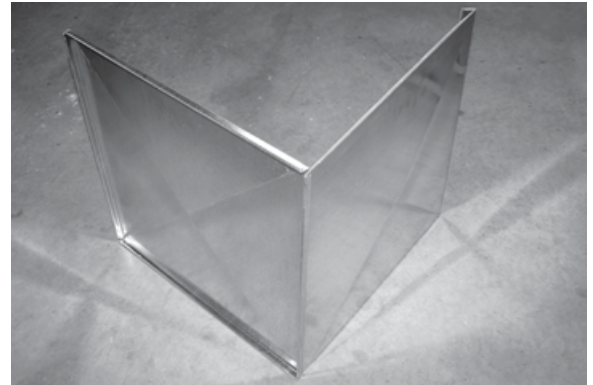


Secure the bottom panel to the side and end panels.

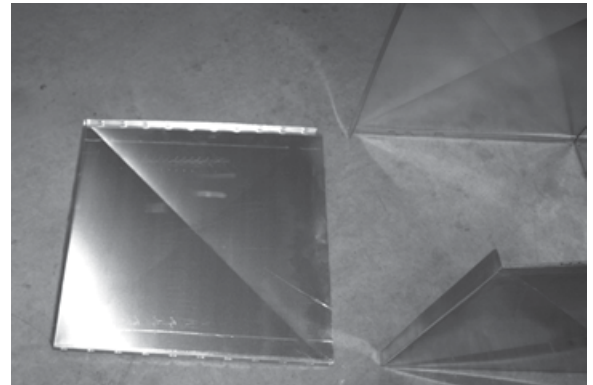

Secure the panel with the cutout for the opening to the filter box assembly.

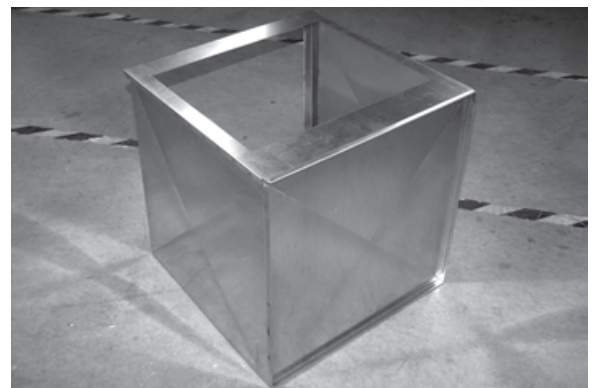


Before locking the filter holder in place decide how the filter box will be attached to the Force 30. The filter box can be rotated so the filter is on the top side, left side or right side. **NOTE: Make sure that the filter box is installed in a way that allows for the filter to be easily changed.** Fold the tabs in the filter holder once the position has been determined.

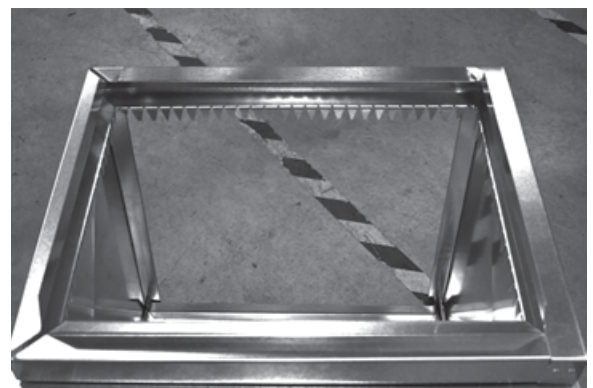

INSTALLATION




Route the wires from the furnace through the hole on the filter box mounting plate and secure the plate to the furnace with the supplied screws. The holes in the mounting plate are pre drilled.

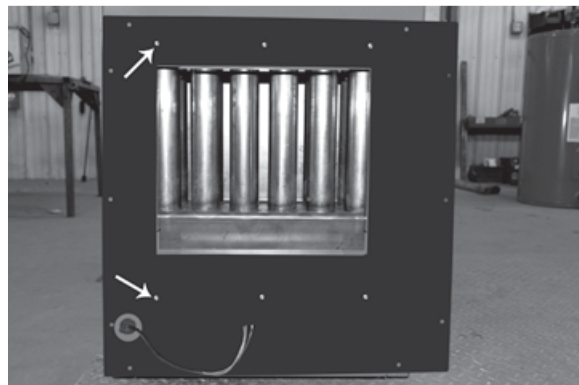

Place the blower on the furnace and use the provided screws to secure it. The blower can only be installed in the shown orientation. Do Not rotate the blower.

NOTE: All wiring should be done by qualified persons.

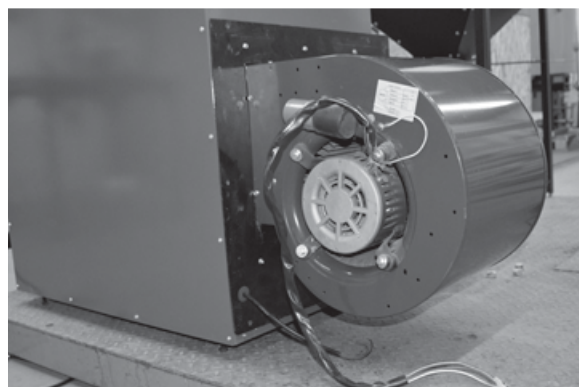

Once the blower is secured and wired, place the filter box over the blower and secure it to the mounting plate with the supplied screws. The ducting system should be installed by qualified persons.



Chimney

The flue pipe to be installed is a rising chimney.

Elbows can be used, but T's are recommended to allow for the cleaning of the flue pipe.

For every one foot of horizontal pipe three feet of vertical pipe is required.

A draft controller should be used to allow proper flow. The draft controller must be installed as close to the furnace as possible.

A draft inducer may be used to ensure proper draft.

The chimney draw must be between $-.45$ and $-.30$ mbars ($-.18$ and $-.12$ inches of water).


The chimney must follow all state and local codes.

The Chimney should be installed by a qualified professional.


Your Force 30 can be vented into an existing chimney as long as the chimney fits the necessary criteria, and does not service any other appliance.

Your Force 30 has two built in power supplies for a draft controller. One is located on the Renovator Pellet Burner. This one will switch the power on or off to the draft controller when the burner switches on or off. The second power supply is under the front panel on the furnace. This will supply constant power to the draft controller. ***NOTE: All wiring should be done by qualified persons.***

Switched Power Supply

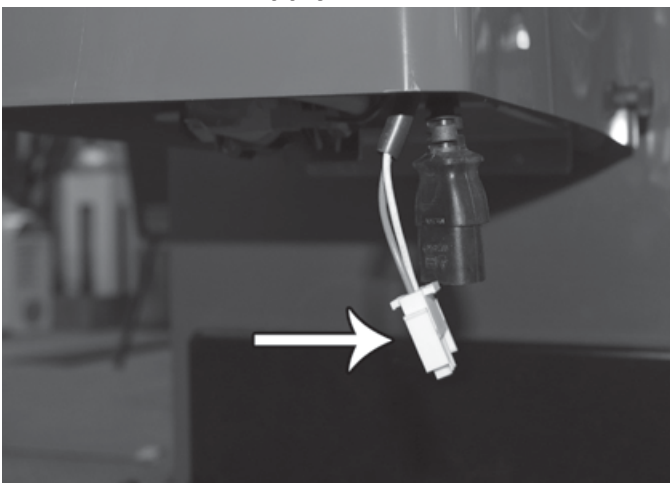

Constant Power Supply

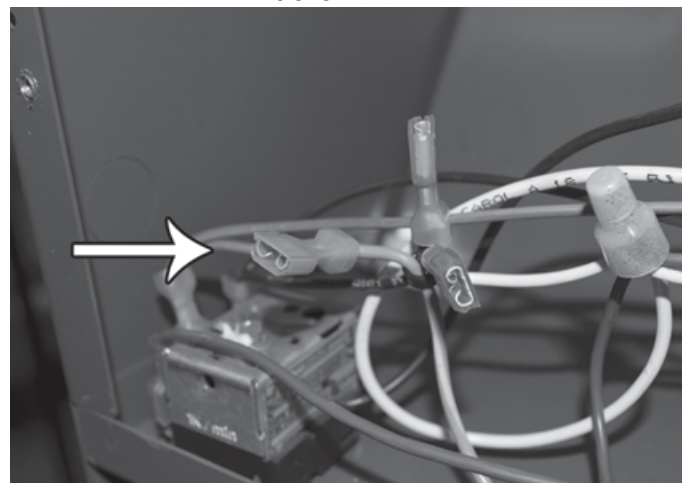

INSTALLATION



Flue Gas Analysis

NOTE: THE FURNACE AND CHIMNEY WILL BE HOT DURING THIS TEST!

Once the furnace is installed, it must be adjusted to proper burn settings. A flue gas instrument needs to be used that can read the following values: Draft, O2%, CO2%, PPM CO and stack temp. The sample is to be taken directly behind the tube access box, in the port provided on the exhaust outlet. Northwest Manufacturing recommends using a Testo 327, 310 or 320 hand held flue gas instrument. **NOTE: Make sure the flue gas instrument used supports biomass fuels, otherwise damage to the instrument may occur. Ensure there is enough heat load to allow for a long burn. Tuning of the burner may take a few hours.**


Measure and set the draft of the furnace prior to running the flue gas analysis. the draft is to be between -.18 and -.12 inches of water.

The target value for oxygen that you are trying to reach is: O2: 6-10.5% the O2 value is the average over a one hour continuous burn. The value will fluctuate slightly during the duration of the burn. It is recommended to wait 3-5 minutes between adjustments to give the burner time to react to the adjustments. Shorter on/off time intervals will result in a more even and efficient burn. When adjusting to the oxygen level, if the O2 level is below the target values, less fuel is needed, if it is above the target values, more fuel is needed.

Note: The boiler should be readjusted each time a new brand of pellets is used.

The target stack temp is between 300 and 350 degrees Fahrenheit. It is possible to have proper O2 values with too high of a stack temp. Reduce the fuel rate to lower the stack temp. The low setting on the burner may need to be used to reduce the air flow and achieve a proper burn. The full 100,000 btu of output is possible in both low and high burner settings. Environmental conditions such as humidity, temperature and elevation will also affect the burner. 12-14 Pounds of pellets will normally be consumed for one hour on a full burn. If fuel is used at a higher rate, the stack temp will increase and the efficiency of the heat exchanger will be reduced.

Once the burner has been properly tuned, fill out the warranty registration card at the back of this manual and return it to Northwest Manufacturing.

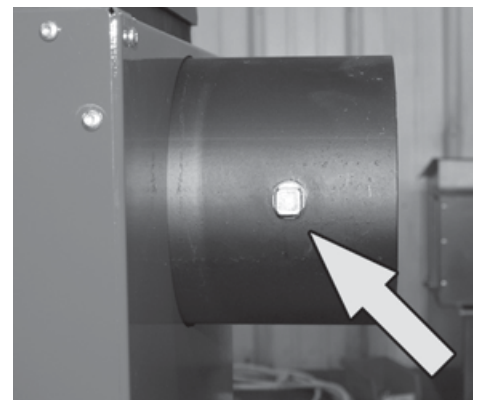

Testing Location

The burner is not adjusted from the factory. The burner has to be adjusted with a flue gas instrument the first time the burner is fired and after a change in fuel brand/quality. **NOTE: The Force 30 is shipped with a protective coating on the heat exchanger to prevent corrosion. This will burn off during the first time firing of the furnace and may briefly produce a blue smoke.**

1. Fill the feed auger with pellets before you connect the tube to the burner. Connect cable of the auger with the power cable for the burner and run it manually until pellets have been fed out from the auger for about 15 minutes. Insert the auger tube into the tipping chute when complete.
2. Setting of start dose (the amount of pellets at ignition). A good start dose is approx. 150 grams (5.25 ounces) We recommend manually measuring the start dos. The start dose is approx. equal to the volume of an 8.5 oz cup.
3. To adjust amount of fuel for operation, a flue gas instrument must be used. The proper adjustment is needed to obtain the cleanest and most efficient burn. This should be made by your authorized WoodMaster Dealer.

Programming and information about the PLC

To make changes to the settings of the PLC, use button 1 to scroll between menus. Once you have found the menu with the setting you wish to change, press the white button on the right with button 4.


Once the white button and button 4 have been pressed one of the values that can be changed is now blinking.

To change the desired value, adjust with buttons 2 (down) and 3 (up).


Buttons 1 and 4 let you scroll between the different settings on each menu.

Press the menu/ok to save any changes made. The value should stop blinking.

1. This is the default home screen. No changes can be made in this menu. Pressing the White button and the Menu/Ok button will briefly change the display to show the date/time screen. This will change back on its own.

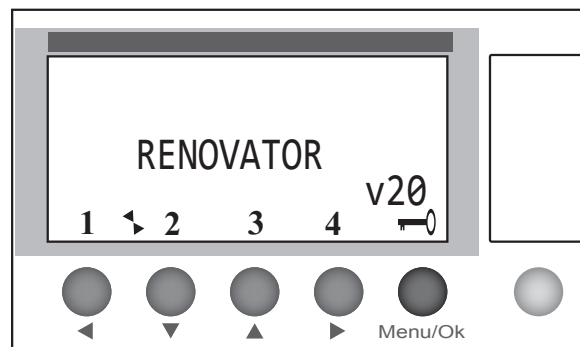


2. In this menu you can set the start dose. Here you choose how many seconds the auger takes to feed the optimal start dose (approx. 150 grams or 5.25 oz) of fuel pellets. Factory default is 70 seconds. This menu also handles the desired value of the photo sensor that controls the flame at combustion. When the sensor feels the flame has reached input value the burner switches to the soft start in the combustion. The photo sensor value can also be read in real time.

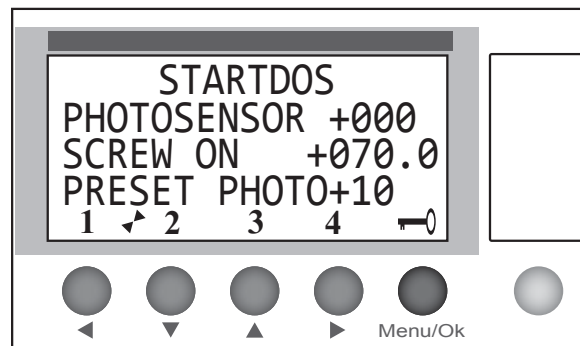


OPERATION




3. In phase two, the soft start level, the auger feeds the burner 5 times with three second operation intervals on the auger before it goes over completely to full burn mode. The three values in this menu can be changed.

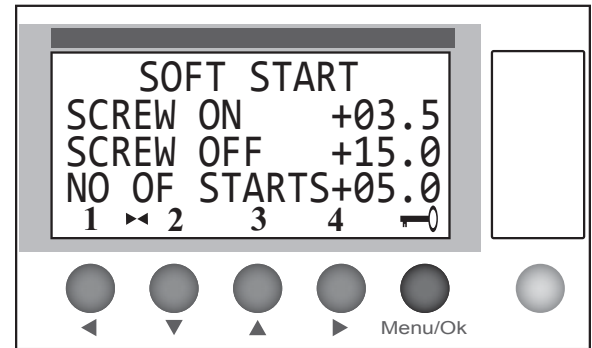


4. The next menu shows the burn mode the burner. The power displayed is the approximate input power. This is where the settings for the burner are changed when adjusting the furnace with a flue gas analyzer. This is made by adjusting the time for the feeding of the auger and time between the feeds. You can also select the mode in this menu. The choices are LOW and HIGH, where the user determines the feed rate, and AUTO mode, where the PLC determines the feed rate. See step 5 for adjusting AUTO mode. Press buttons 2 and 3 together to change this value. You do not have to press button 4 and the white button prior to changing this setting.

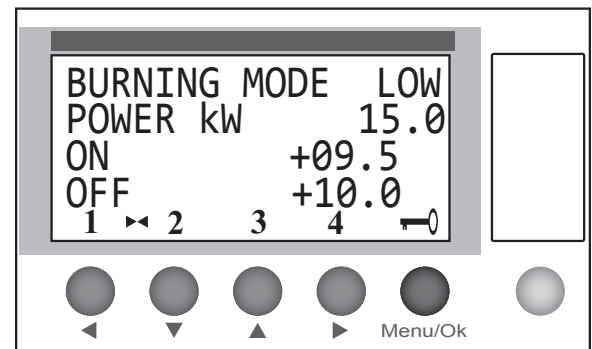


5. The Startdos value in this menu (this is a different setting than the startdos previously described) is adjustable between 100 and 400 grams and is the adjustment used when the burner is in Auto burning mode. The MAX RUNTIME value is how long the burner will run before shutting down to self clean. The default value shown is 1/2 an hour. If heat is still called for, the burner will restart after the cleaning is completed. You can also read the operation time of the burner and how many times it has started.

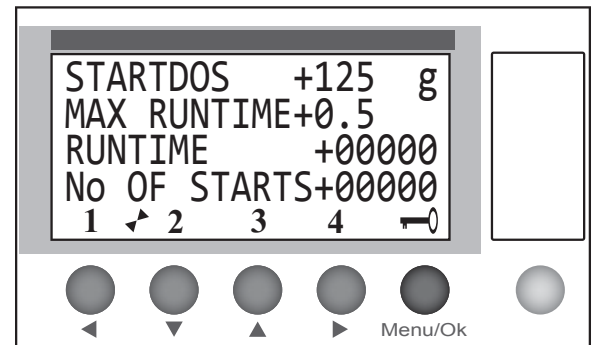

6. This menu displays the current room temperature and allows you to set the desired temperature. The selected temperature can be changed. The room temp is the temperature that the supplied temp sensor is detecting. The burner comes with a temperature sensor that starts and stops the burner. A wall mounted thermostat can be wired directly to the PLC on the burner. If a wall mounted thermostat is used, disconnect the temperature sensor. If a wall mounted thermostat is used, the selected value can no longer be changed in this menu, and is instead controlled by the thermostat.

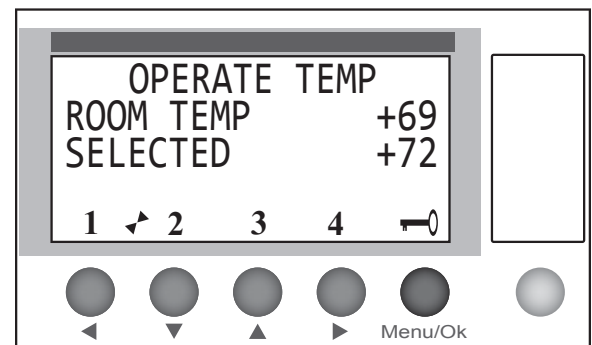


7. The PLC also keeps track of some faults that could be useful to in the event of a problem occurring. This history shows how many ignition errors, fuel errors and if the burner has overheated via the temperature sensor that is placed on the tipping chute. There are no values that can be changed in this menu.

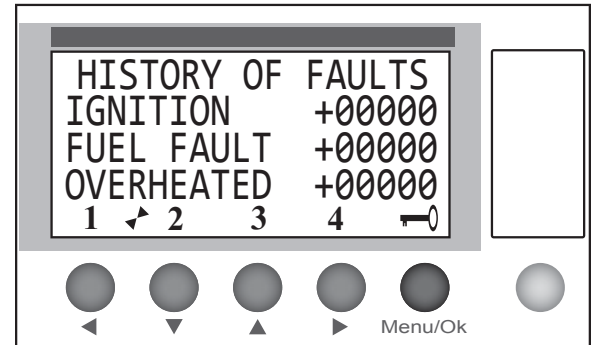


Alarm (The display shows a message and the burner has turned off.)


8. This alarm example indicates an error has occurred to the sensor that controls the furnace temperature. ***Do not attempt to start the burner.*** Turn off the burner and check the connections for the sensor. restart the burner. If the problem persists, contact your dealer or Northwest Manufacturing, Inc.

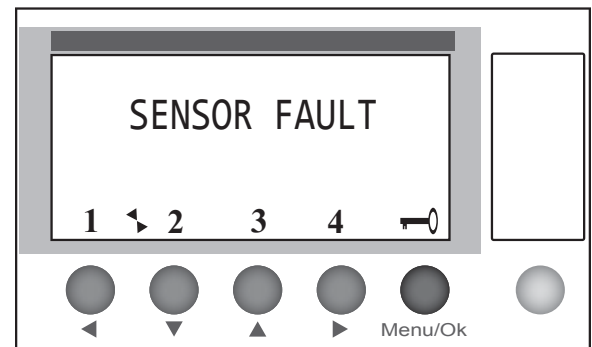


9. When this alarm appears the pellet hopper is empty. Please refill the pellet hopper with pellets. This will only appear if you have set up a level sensor in the pellet hopper. If you do not have a level sensor in the pellet hopper, then a FUEL FAULT will occur. See the troubleshooting section for further assistance.

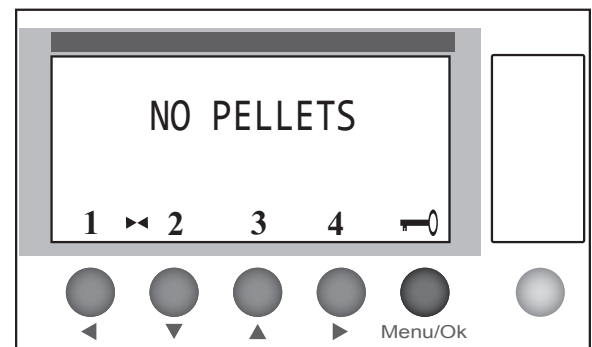

10. When this alarm appears on the burner turn the power off to the burner once the combustion fan has stopped. Allow the furnace to cool and clean the furnace. Check the blower air box filter and replace if the filter is dirty. Turn the burner back on and reset it. To reset the burner hold down button 4 until the PLC is reset. If the problem persists, there could be a lack of proper draft. Contact your dealer or Northwest Manufacturing, Inc. or see the troubleshooting section for further assistance.

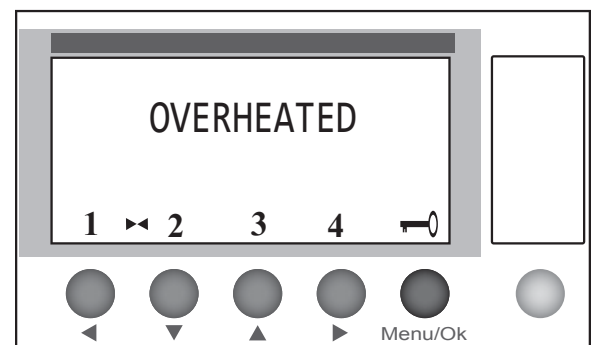


11. Error on the ignition element. This may be caused by an incorrect start dose, a dirty burner or a failed igniter. Turn off the burner and restart. Check to make sure you have the correct start dose settings, or check the connection for the feed auger. If the burner starts, no further action is needed. If not see the troubleshooting section for further assistance. If the problem persists or if the igniter is bad, contact your dealer or Northwest Manufacturing, Inc.

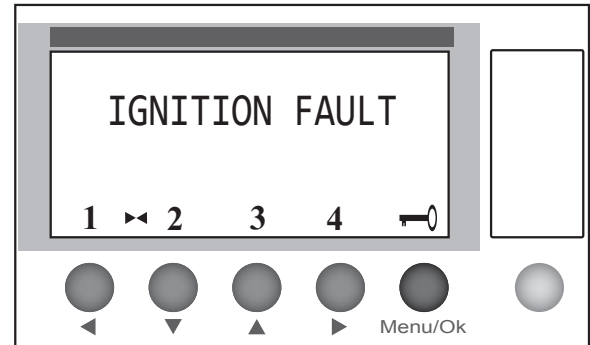

12. The error “FUEL FAULT” can be displayed for multiple issues:

1. Make sure there are pellets in the pellet hopper.
2. Make sure that the auger drive motor is working by connecting the power cord of the burner and the power cord of the auger.
3. If the pellet hopper is empty it is best to fill and run the auger until pellets come again manually. Let the auger run for approx. 10 -15 min to get an even dosage.
4. Make sure the pellets in the pellet hopper are not cavitating. If this is occurring, clean the pellet hopper.

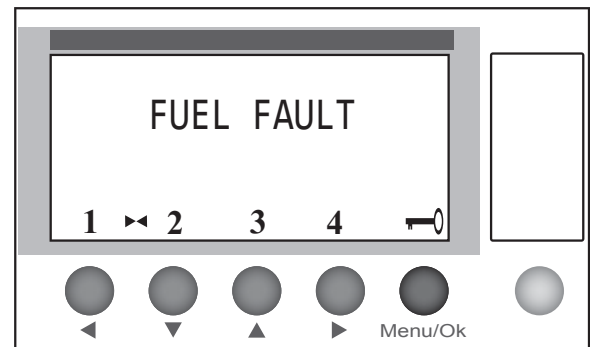

If the problem persists, contact your dealer or Northwest Manufacturing, Inc. See the trouble shooting section for further assistance.

13. Shutting the Burner Off

When shutting off the burner, either for maintenance or for the end of the season, the burner must be allowed to enter and complete its shutdown process. Failure to allow the burner to shut down properly can result in damage to the burner, especially if done repeatedly. It will also greatly reduce the burners efficiency. If the burner is idle and the combustion fan is off, the burner can be switched off.


If the burner is running, either wait for the thermostat reaches its set point to switch the burner off, or lower the thermostat to switch the burner off. Once the air clean occurs and the combustion fan stop, shut off power to the burner and allow to cool before cleaning.

The Force 30 and Renovator should be cleaned regularly. It is recommended that the furnace and burner should be cleaned every 2 weeks or 1000 pounds of fuel used. CAUTION: THE BURNER AND FURNACE MAY BE HOT!

Sweeping the Heat Exchanger Tubes


Regular cleaning of the heat exchanger tubes is done from the top by removing the flue tube clean out door on the top of the furnace. Ensure the furnace has had ample time to cool before cleaning the heat exchanger tubes and emptying the ash box. Dispose of ash in a metal container away from combustible materials. When cleaning the heat exchanger tubes ensure that you do not damage the ceramic insulation in the process.

NOTE: Make sure the cables and hoses are not damaged during the cleaning process.

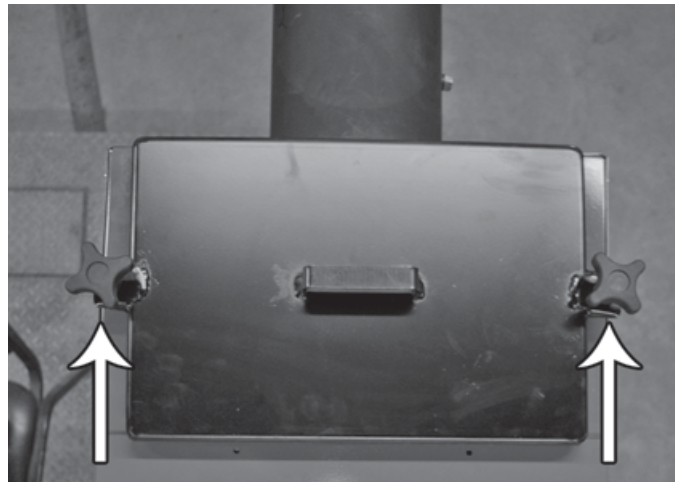


Unscrew the two black knobs and remove the tube access cover from the top of the furnace.

Remove the diverting plate.

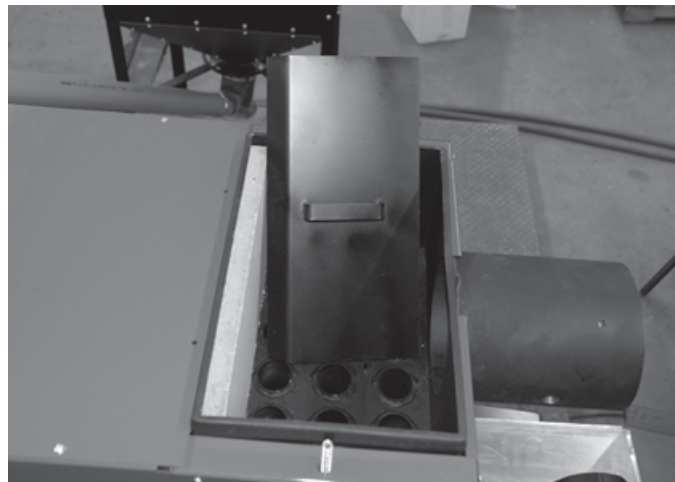


Clean each tube with the wire brush. vacuum any ash out of the top tube access box.

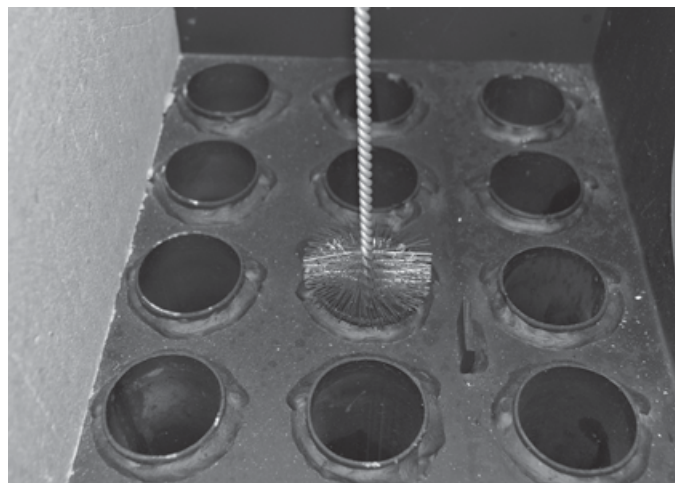


MAINTENANCE




Replace the diverting plate, making sure it is installed correctly, and covering the two sets of tubes at the front of the furnace.

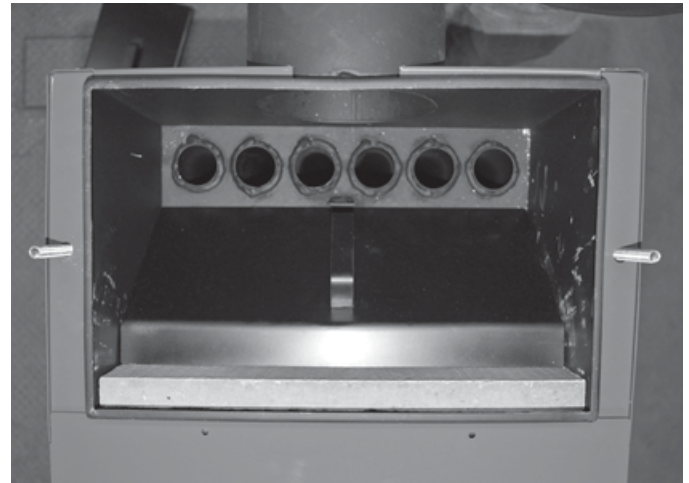

direction that the flue gas travels when the diverting plate is installed

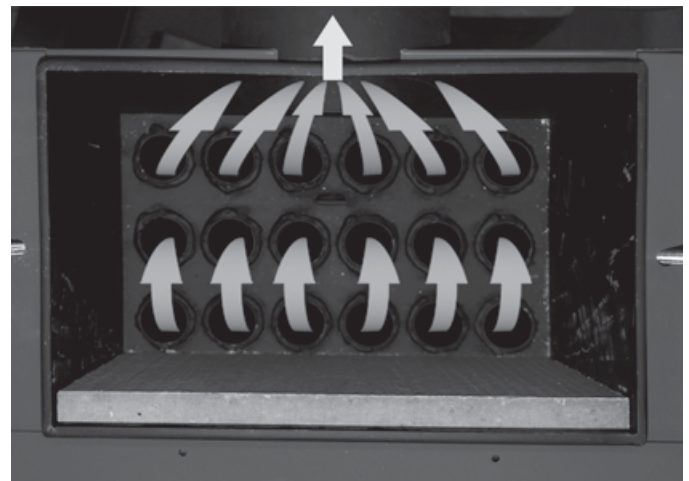

Unscrew the door for the ash box and empty the ash box.

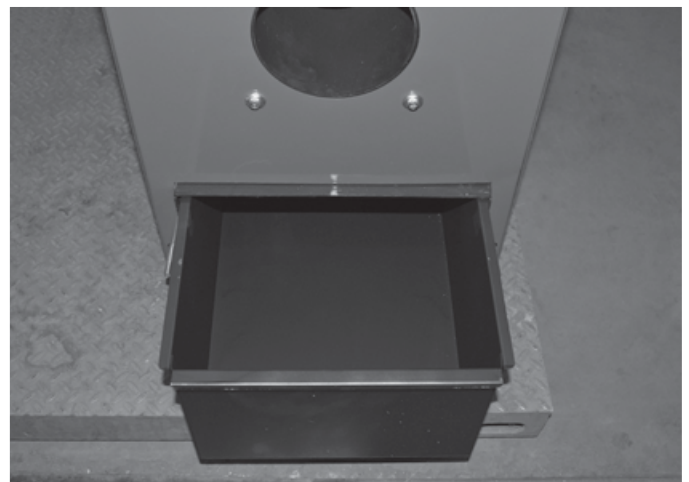

The Force 30 has an extra large ash box in the bottom of the furnace. The ash box should be checked and emptied regularly. The ash box can hold approximately 1-2 weeks worth of ash, or 1000 pounds of pellets that have been burned. Cleaning intervals will vary depending on heat load, pellet quality and burner settings.

WARNING: Before performing any of the following tasks, ensure that the power is disconnected from the furnace and the burner, and that all components of the system have had ample time to cool.


Cleaning the Burner

Manual cleaning is a simple process. Removal of the firepot takes only a few minutes. Below is a step by step process for burner removal. The burner and chimney should be cleaned twice a year.


Removal and Cleaning of the Burner

Disconnect the cables on the side of the burner.


Remove the auger tube from the burner chute. Remove the four thumb screws that hold the cover on the burner. Remove the cover.

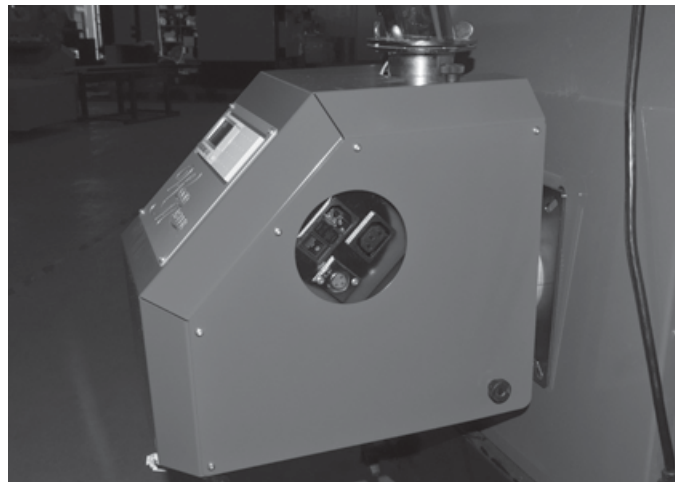

Disconnect the air line from the air compressor by pushing in the blue collar on the fitting, while pulling out on the hose.

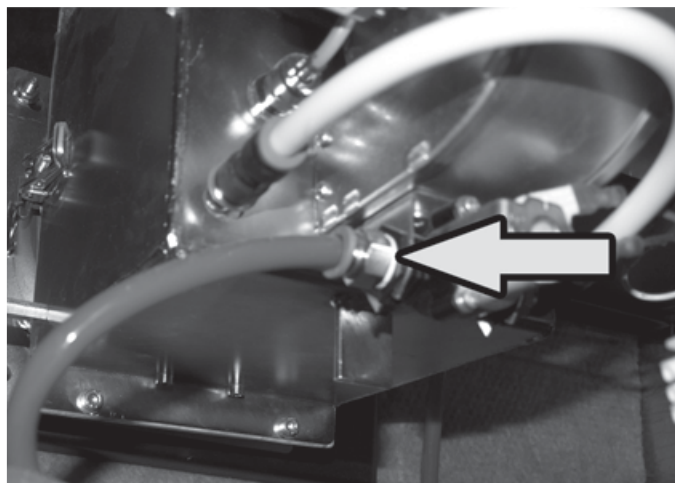


Release the quick latches that hold the sections together. Be careful as to not damage the gasket between the sections.

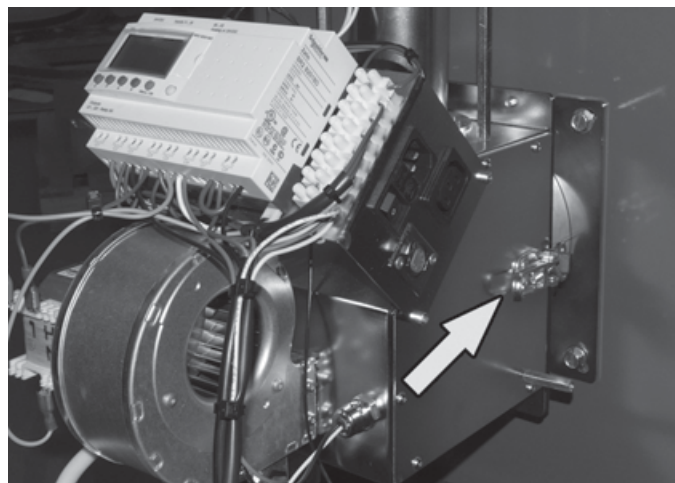

MAINTENANCE




Lifting Up on the combustion fan, carefully lift the burner assembly off of the fire pot.

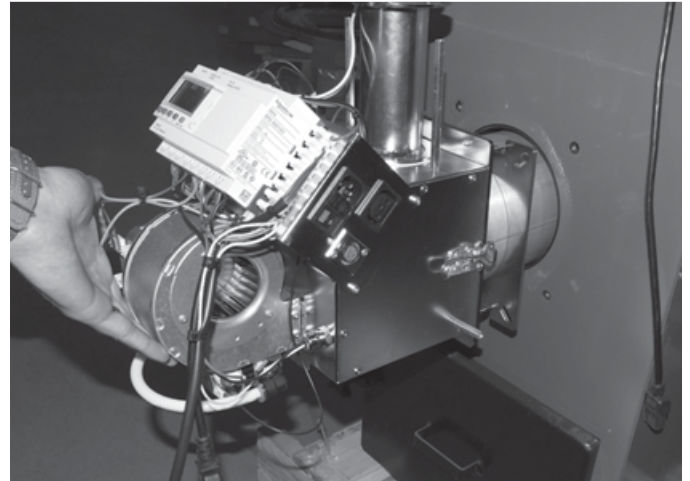


Carefully remove the gasket.




Slide the burn pot out of the boiler.

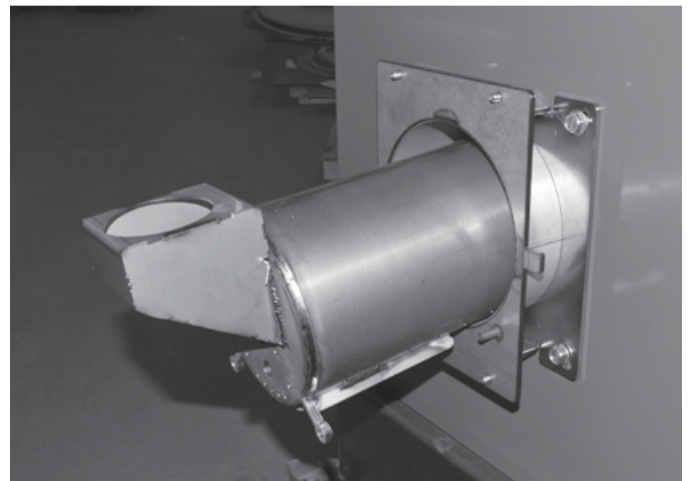


Inspect the inner burner sleeve for warping or other damage. Replace if necessary.

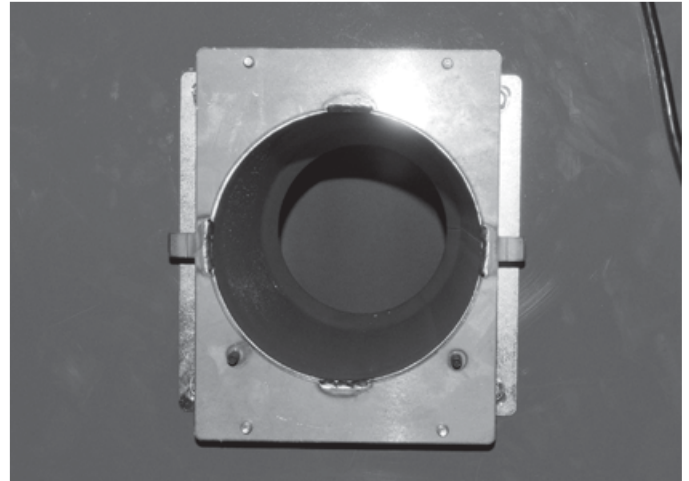

Clean any buildup out of the burn pot, and clean all debris out of the air holes.

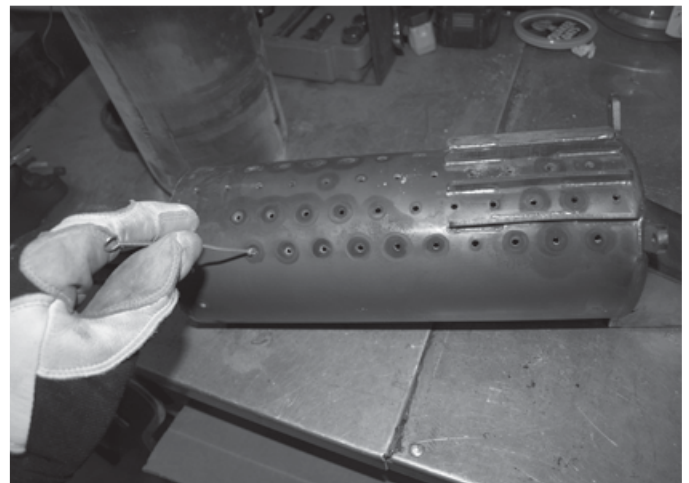


Once clean, insert the inner part of the burn pot into the outer sleeve. Ensure the alignment pins line up.

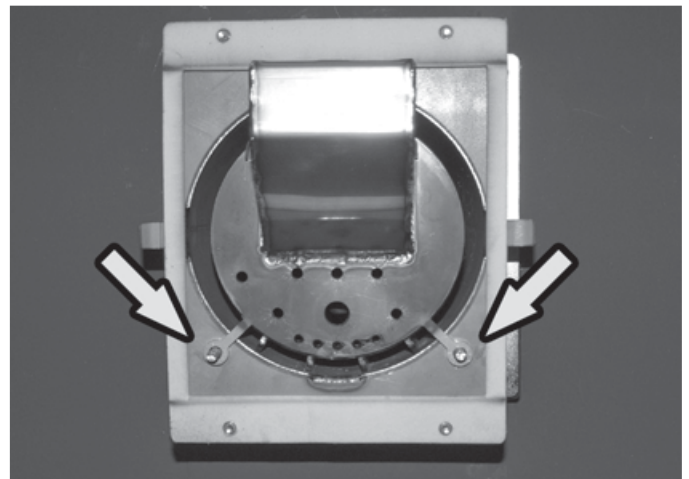

When reassembling the burner, line up the four alignment screws that align the sections together with the gasket in place. Then latch the quick latches.

Repeat the reset of the removal process in reverse to reassemble the burner.

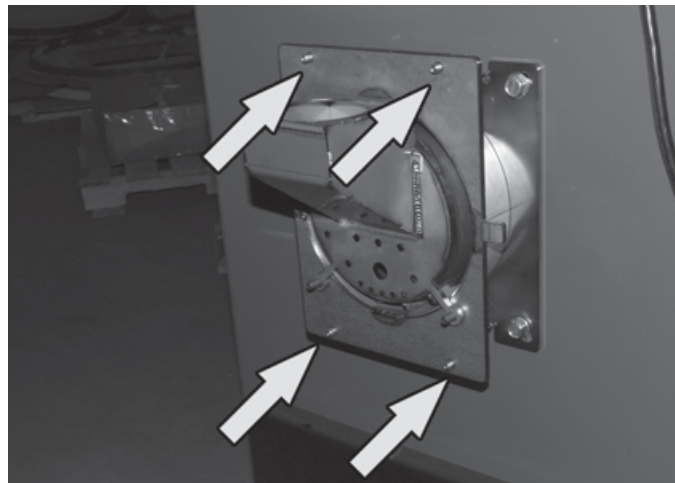

WARNING: Before performing any of the following tasks, ensure that the power is disconnected from the furnace and the burner, and that all components of the system have had ample time to cool.


Replacing the Igniter

The igniter is located inside the air box of the burner. Remove the burner as shown on the prior page. It is recommended to clean the firepot while the burner is removed. Disconnect the two power wires for the igniter. The connection for the wires are located outside of the air box. Then loosen the screw that holds the igniter in the mount. Carefully remove the old igniter and place the new one in the mount. Secure the screw and plug the igniter in. Properly secure all wires. Remount the burner.



Replacing the Flame Guard

The flame guard is located inside the burn pot of the burner. Remove the burner as shown on the prior page. The flame guard is in the chute of the burn pot. To remove the flame guard, first locate the metal pin that holds the guard in place. Bend one end of the pin straight. Carefully pull the pin out the other end. Carefully put the new guard in place and slide the pin in, ensuring that the pin properly goes through the guard. Once in place, bend the straight end of the pin to lock it in place. Ensure the flame guard moves freely before reinstalling the burn pot in the furnace.

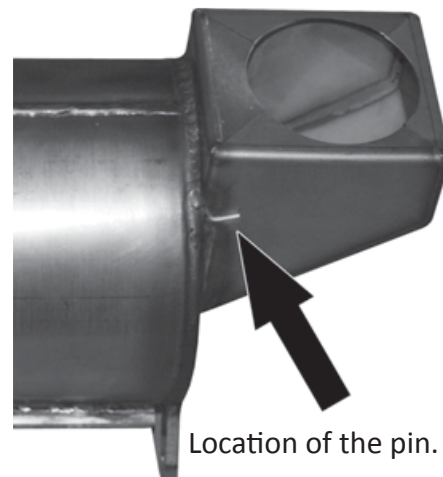

Error	Cause	Solution
The burner has stopped. "Fuel fault" is on the display.	<ol style="list-style-type: none"> 1. The pellet hopper is empty. 2. An air pocket has developed in the inlet of the feed auger. The fuel is cavatating in the pellet hopper. 3. The auger has been blocked by waste. 4. The tipping chute is plugged. 	<ol style="list-style-type: none"> 1. Fill the pellet hopper with pellets. Restart the furnace. 2. Agitate the fuel in the pellet hopper. NOTE: Ensure power to the auger is disconnected before agitating fuel. 3. Clean the feed auger. 4. Decrease the start dose.
The burner stops even though it ignites.	<ol style="list-style-type: none"> 1. Too heavy of feeding during the soft start or combustion phase. 2. Flame guard is dirty or broken. 	<ol style="list-style-type: none"> 1. Adjust the fuel feed rate. 2. Clean or replace the flame guard.
The burner does not ignite. "Ignition fault" is on the display.	<ol style="list-style-type: none"> 1. Incorrect start dose. 2. Broken ignition element. 3. Stop in tipping chute. 	<ol style="list-style-type: none"> 1. Change the start dose. 2. Replace the ignition element. 3. Clean the tipping chute.
The burner stops without visible reason.	<ol style="list-style-type: none"> 1. Incorrectly adjusted burner. 2. Too much back pressure in the chimney. 3. Error in the fuel feeding. 	<ol style="list-style-type: none"> 1. Adjust the burner. 2. Install a draft fan/controller. 3. Test with O2 Sensor 4. Clean the feed auger.
"Overheated" on display.	<ol style="list-style-type: none"> 1. Too low of draft in the furnace. 2. Dirty filter in the filter box 3. Safety temp limiter has tripped 4. There is no power to the burner 	<ol style="list-style-type: none"> 1. Turn off the burner and clean the furnace, burner and air filter. 2. Check to ensure proper airflow in the System. Clean the filter. 3. Check to ensure the chimney is not restricted. 4. Check the power to the furnace and the burner. Check the breaker.

TROUBLESHOOTING

WOODMASTER®

Safety temperature limiter (STL)

The Force 30 furnace is equipped with a Safety Temperature Limiter to shut power off to the burner in the event that the heat exchanger overheats.

To restart the furnace if the STL has been tripped you must:


1. Wait until the furnace temperature cools.
2. Clean both the furnace and the burner.
3. Check for proper air flow in the chimney, in the furnace heat exchanger and in the filter box.
4. If the problem persists, contact your dealer or Northwest Manufacturing, Inc.




10 Amp Circuit Breaker

The Force 30 furnace is equipped with a 10 amp circuit breaker. The reset switch is located on the furnace, above the burner. If the problem persists, contact your dealer or Northwest Manufacturing, Inc.



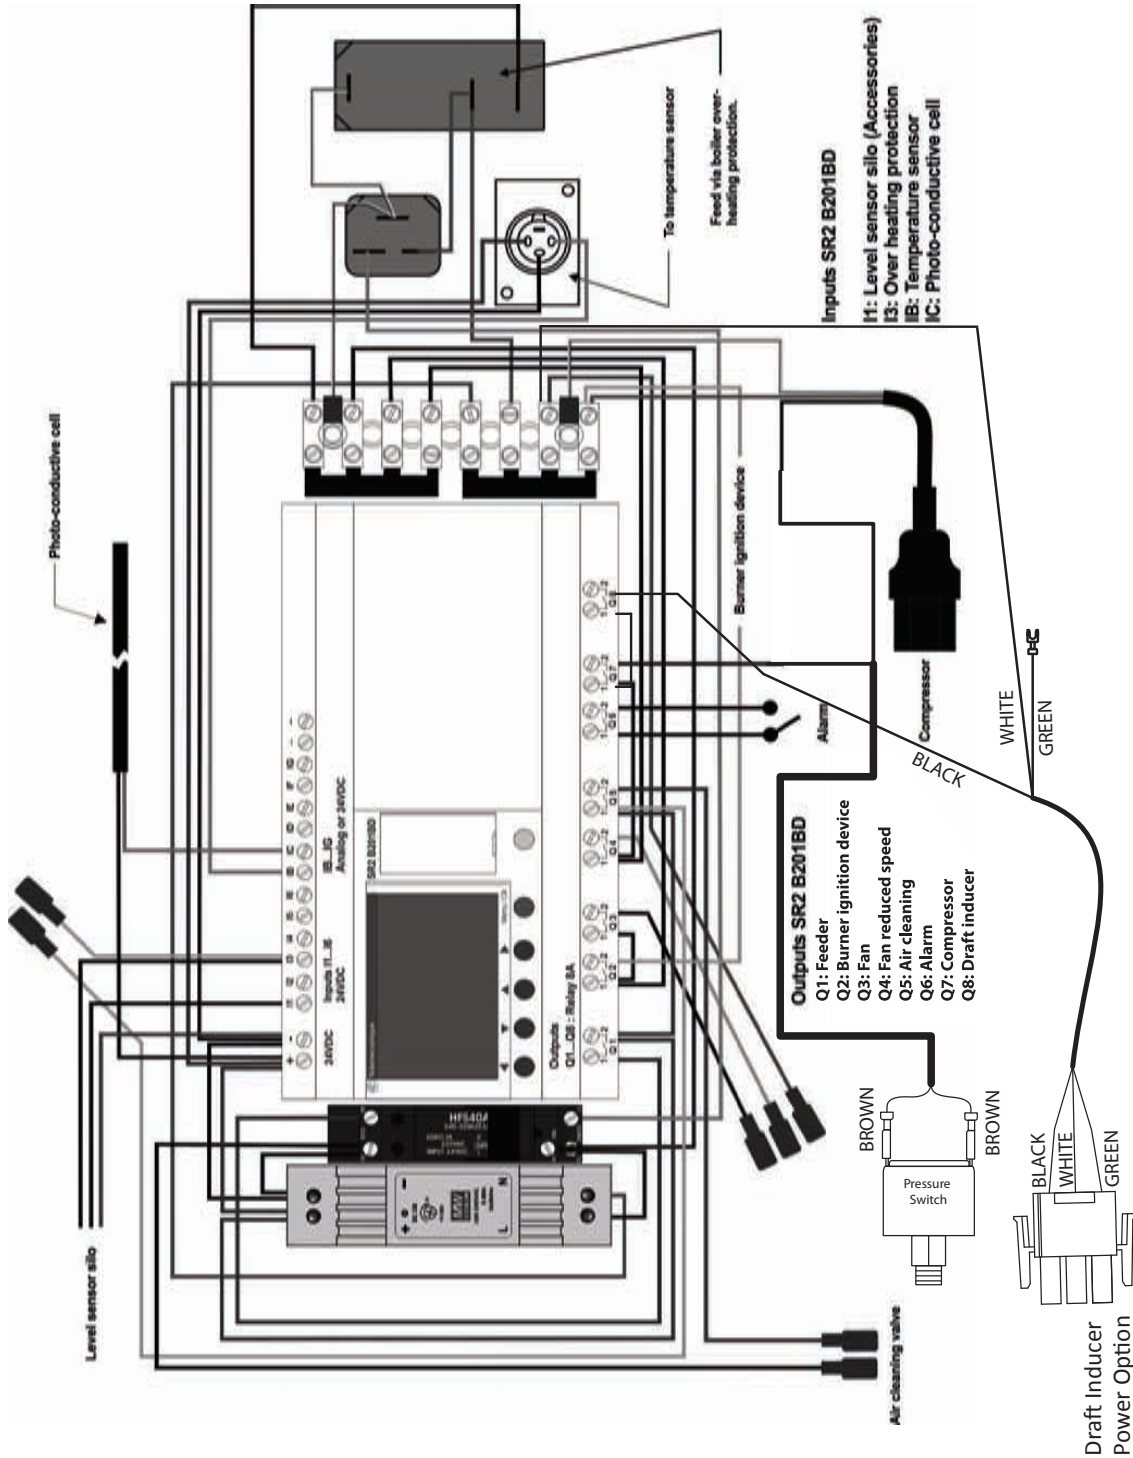

WIRING

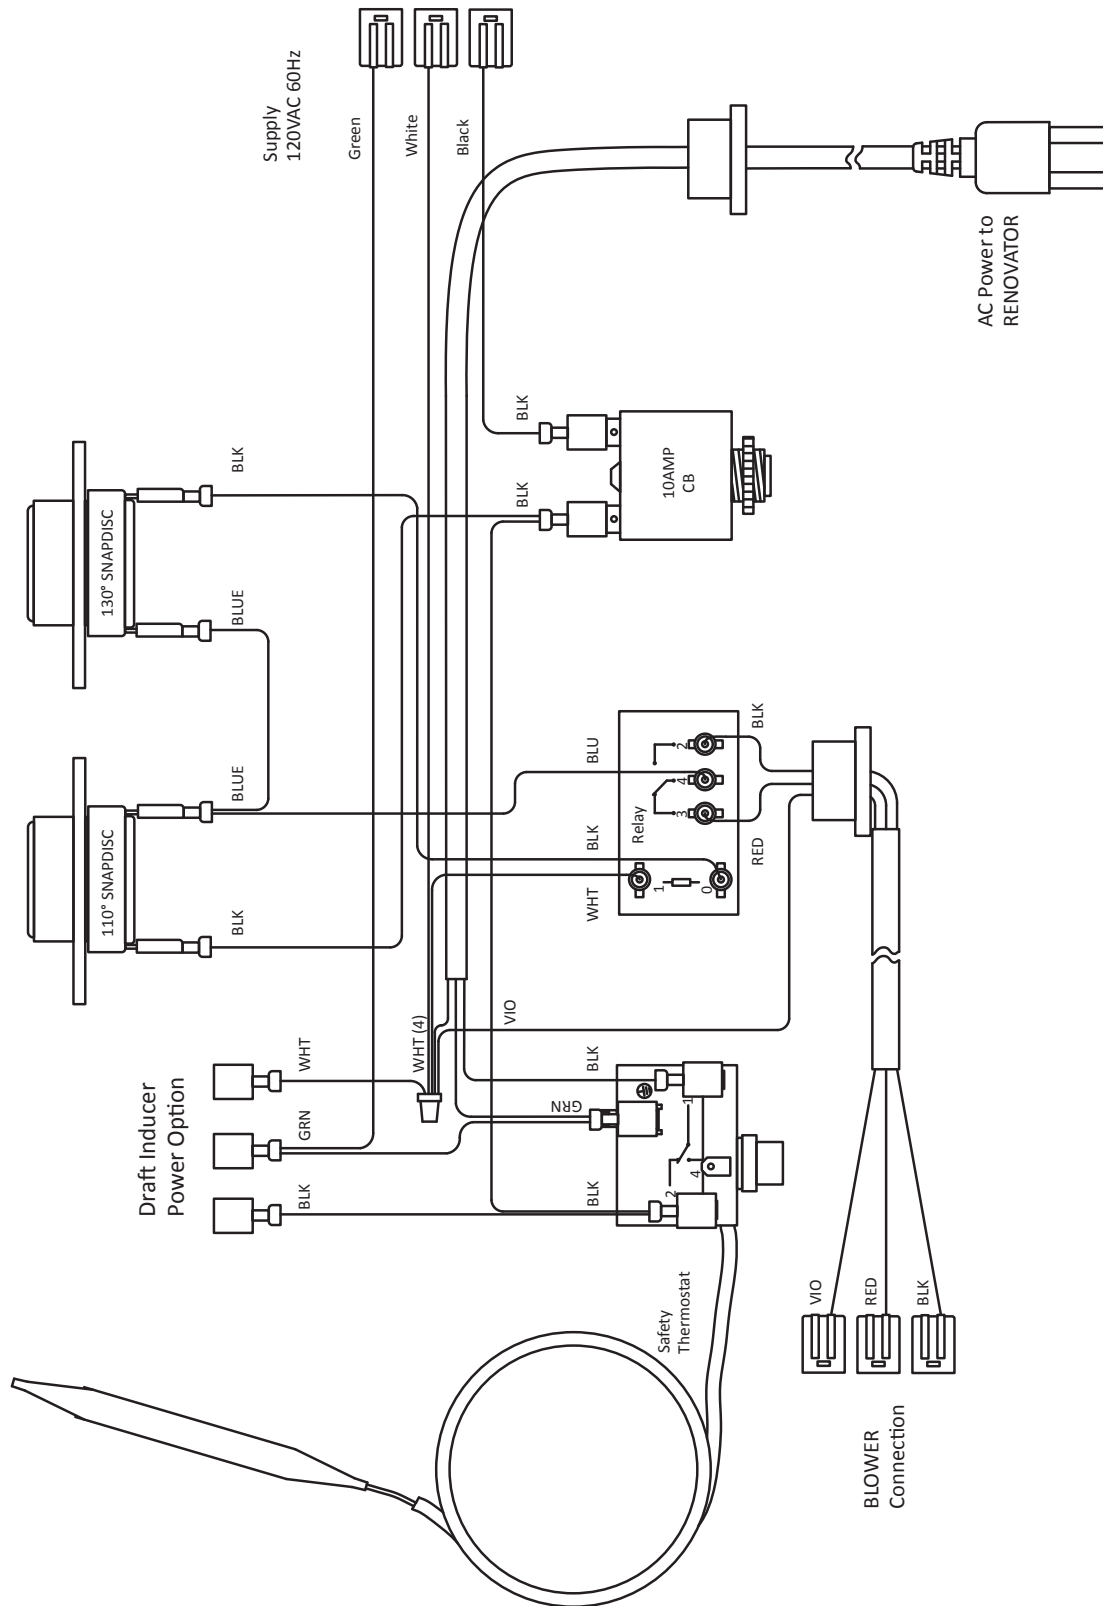



SPECIFICATIONS

Flue Pipe	6" Diameter
Power Connection	120v
Maximum Current Draw*	7.73 Amps @ 120 v, 60 Hz
Blower (Max Draw)	6.9 Amps @ 120 v, 60 Hz
Igniter (Max Draw)	6.7 Amps @ 120 v, 60 Hz
Burner (Max Draw)	0.83 Amps @ 120 v, 60 Hz
Maximum Power (Input)	102,000 BTU
Ash Box Volume	2 cubic Foot (approx)
Weight - Furnace only**	325 Pounds (approx.)
Weight - Metal Hopper**	100 Pounds (approx.)
Weight - Burner, Auger, Blower**	115 Pounds (approx.)
Hopper Capacity***	280 Pounds (approx.)
Height	58"
Width	18.5"
Depth	40.5"
Blower (circulation fan) Capacity	1100 CFM -1638 CFM
Blower (circulation fan)	Multi Speed
Duct Connection Diameter	12"

*Note: The maximum current draw is calculated by the adding the max draw of the burner plus the blower. The blower and igniter should not operate simultaneously, but it may happen under the proper circumstances.

**Note: The weights of the components are subject to change, and additional duct work will add weight to the system.

***Note: The hopper weight capacity will vary depending on the quality of the fuel used.

WARRANTY



FIVE (5) YEAR LIMITED WARRANTY - FIREBOX & HEAT EXCHANGER

This Warranty is provided by Northwest Manufacturing, Inc. only for the benefit of the initial purchaser (Original Owner) of the Northwest Manufacturing, Inc. Force 30 Pellet Furnace (the "Furnace") on the original site of installation (the "Site of Original Installation"). This Warranty provides specific legal rights. You may have other rights depending on where you live.

The rights in this warranty depend on the proper assembly, installation and commissioning of the Furnace by a dealer or installer who is certified by Northwest Manufacturing, Inc. (the "Certified Contractor"); and proper operation and maintenance. Proper maintenance in accordance with the Maintenance Intervals (as defined herein) must be preformed. Installation by an uncertified or unqualified contractor or installer and/or improper maintenance, operation, misuse or abuse of the Burner shall void this Warranty in whole or in part.

LIMITED FIVE (5) YEAR WARRANTY FOR THE HEAT EXCHANGER

Northwest Manufacturing, Inc. warrants that the Heat Exchanger of the Furnace shall be free of defects in material and workmanship for FIVE (5) YEARS from the Date of Original Installation. If there is a defect in your properly delivered and installed WoodMaster Force 30 in the first year, WoodMaster will replace the heat exchanger at no cost to the original owner. Northwest Manufacturing, Inc. will only pay costs of warranty work for years two (2) through five (5) – 100% of warranty work, once a defect is determined, repair or replacement of the Heat Exchanger, in a whole or part, will be at the sole discretion of Northwest Manufacturing, Inc..

LIMITED ONE (1) YEAR WARRANTY ON THE BURNER AND ELECTRICAL COMPONENTS

Northwest Manufacturing, Inc. warrants to the Original Owner, That the Renovator Pellet Burner (the "Burner") is free from manufacturing defects for the period of one (1) year from the date of installation. Northwest Manufacturing, Inc. will not warranty the Flame Guard and endstop on the burner, these items are consumable items and in the case of normal wear is the responsibility of the owner to replace as necessary. Northwest Manufacturing, Inc. warrants any electrical components are free from defects for the period of one (1) year from the date of installation. Northwest Manufacturing, Inc. will determine whether to repair or replace the defective parts.

LIMITED ONE (1) YEAR WARRANTY ON ADDITIONAL COMPONENTS

Northwest Manufacturing, Inc. warrants to the original owner only, any additional components, including, but not limited to the outer shell, paint, insulation, doors and latches during normal usage for a period of one (1) years from the date of installation.

START OF WARRANTY PERIODS

The Warranty Period shall begin on the date the Furnace and Burner installation has been completed (the "Original Date of Installation"). In the event of dispute as to the Date of Original Installation, the shipping date of your Furnace and Burner, as recorded by Northwest Manufacturing, Inc., shall be deemed to be the Date of Original Installation.

WARRANTY LIMITATIONS

I. Damages for unsatisfactory performance caused by improper installation or any damages caused by or as a result of improper use of the Furnace and Burner, incorrect start-up, incorrect or careless handling, improper control adjustment, incorrect burner adjustment, disregard of the operating instructions and proper maintenance or disregard of any other instructions supplied with the Furnace and Burner, improper operation of the Furnace and Burner or improper alteration and repairs/service by a third party not affiliated with Northwest Manufacturing, Inc. will not be covered under this warranty. All repairs must be performed by a Certified Contractor.

II. The warranty will not cover damage to parts caused by improper installation, improper care or maintenance. The Furnace, Burner and any installed accessories must be serviced, inspected and cleaned at regular intervals. Northwest Manufacturing, Inc. will NOT warranty damage to the Furnace and Burner due to ash corrosion.

III. The workmanship, repairs or replacement of parts of the Certified Contractor will not be covered under this warranty.

IV. Components of the heating system not furnished by Northwest Manufacturing, Inc. as part of the Furnace and Burner and components of the Burner are not covered under this Warranty. Damages caused by components of the heating system not supplied by Northwest Manufacturing, Inc. will not be covered under this Warranty.

V. Fuels used in the Burner must meet the specifications set out by Northwest Manufacturing, Inc.. Suitable fuels are listed in the owners manual. Damage caused by the use of any unapproved fuel, or any fuel that does not meet the guidelines set forth by Northwest Manufacturing, Inc. will not be covered by this warranty.



WARRANTY

VI. Any costs for labor for the examination, removal or reinstallation of allegedly defective parts, transportation of the parts to and from Northwest Manufacturing, Inc. facilities will not be covered and will be the responsibility of the Original Owner. This includes any other labor and costs for any material necessary for the said examination, removal or re-installation.

VII. The warranty will not cover damage to the Furnace and Burner or any of their original parts, replacement parts or other accessories or standard equipment caused by excessive temperatures or pressures, vandalism, fuel or gas explosion, electrical, chemical or electrochemical reaction, electrical failures, insurrection, riots, war, acts of God, combustion air contaminated externally, air impurities, sulfur or sulfuric action or reaction, dust particles, corrosive vapors, oxygen corrosion, and situating the Furnace and Burner in an unsuitable location or continuing use of the Furnace and Burner after onset of a malfunction or discovery of a defect.

VII. Consumable parts, and parts in direct contact with the flame, will not be covered under this warranty.

WARRANTY TERMS

The Warranty shall also be subject to the following terms and conditions:

I. The Furnace and Burner must have been installed by a Certified Contractor.

II. The Furnace and Burner must have been properly maintained, cleaned and serviced during the Warranty Periods in accordance to the manual.

III. This Warranty is non transferable and only covers the Original Owner, at the original site of installation.

IV. Northwest Manufacturing, Inc. shall have the time needed and unobstructed access to the Furnace and Burner for the purpose of conducting tests of the Furnace and Burner and for the making of repairs or installation of replacement parts.

V. Repairs, replacement or the repair of replacement parts shall be subject to the terms and conditions of this Warranty as if they had been installed at the time of original installation.

VI. This Warranty is limited to the provisions previously described and does not extend to any Furnace and Burner, related parts or products that are (a) not sold in Canada or the United States; (b) not installed in Canada or the United States; or (c) not purchased from an Authorized Distributor.

VII. Northwest Manufacturing, Inc. shall not be responsible for any consequential damages, direct or indirect caused by the products described in this Warranty.

APPLICABLE LAW

All disputes or claims on the Warranty shall be determined in accordance with the laws of Red Lake County, Minnesota.

WARRANTY CLAIM/SERVICE

Notify the Certified Contractor who installed your Furnace and Burner. The Contractor will then notify Northwest Manufacturing, Inc. who will make all warranty decisions. No warranty work can be carried out without approval from Northwest Manufacturing, Inc.. If the Certified Contractor fails to make a warranty claim, contact Northwest Manufacturing, Inc. directly. Allegedly defective parts MUST be returned to Northwest Manufacturing, Inc. for the purpose of inspection to determine cause of failure.

Northwest Manufacturing, Inc. / 600 Polk Ave. SW / Red Lake Falls, MN 56750-5002

(800) 932-3629 • Fax: (218) 253-4409 / www.woodmaster.com



Cut here and mail registration card

Northwest Manufacturing Inc.
600 Polk Ave. SW
Red Lake Falls, MN 56750

PLACE
POSTAGE
HERE

Northwest Manufacturing Inc.
600 Polk Ave. SW
Red Lake Falls, MN 56750

WoodMaster Force 30 Warranty Registration Card

Please fill out the warranty registration card below and mail it back to us.

Failure to register may delay warranty claims.



Serial Numbers

Burner _____

Heat Exchanger _____

Owners Name _____

Address _____

City _____ State _____ Zip _____

Daytime Phone _____ Home Phone _____

Email _____ Date of Purchase _____

Dealers Name _____

Address _____

City _____ State _____ Zip _____

Phone _____

How did you learn about our product?

Radio ☐ Newspaper ☐ Internet ☐ TV ☐ Print ☐ Other _____

Would you like information on other products from Northwest Manufacturing, Inc.? ☐ Yes ☐ No

Measured start dose in grams: _____ Dosage time in seconds: _____

Setting of operation time, On _____ Off _____ Max run time: _____

Flue Gas Meter Readings: O2 % _____ CO2 % _____ PPM CO _____ Stack Temp _____ Draft _____
(Degrees Farenheit) (In H2O)

I have read the owners manual and understand the proper usage of my WoodMaster Force 30.

Signature _____ Printed Name _____

Cut here and mail registration card



TERMS



Force 30 - Forced air pellet furnace

Renovator AKA Burner or Pellet Gun - Combustion chamber that burns pellets

Air Compressor - Optional on board air cleaning agent. an optional adapter (pn: 0020-213) can be used to attach the air cleaner to a shop air compressor

PLC - Programmable Logic Control - Controls the burner

Start Dose - Amount of fuel need to initiate ignition (approx. 5.25 oz, 150 grams, and 8.5 oz in volume)

Photo Sensor - Reads the photo resistance value to control the flame from ignition to combustion

Auger Spiral - Feed auger screw

Pellets - Wood sawdust compressed into small cylinders to be used as fuel

Fault - An error or malfunction during the ignition or combustion process

Flue AKA Chimney - any duct or passage for air, gas or exhaust

O2 The oxygen that is in the flue gas

Flue Gas Analyzer - O2 sensor that is used to properly calibrate the air to fuel ratio of the burner. (Testo 327, 310, 320)

End Stop - Replaceable plate at the end of the burn pot that prevents the pellets from falling off the burn pot

Flame Guard - A guard that prevents the flame from going up the intake chute

Igniter - A heating element that ignites the pellets

Tipping Chute - The fuel inlet pipe on the Renovator

Combustion Fan - The fan that controls the air flow for combustion

Blower aka Circulation Fan - A multi speed fan that circulates hot air through your heating system

[illegible]

NOTES

[illegible]



www.woodmaster.com / 800-932-3629 / Manual PN: 7994-805

Northwest Manufacturing, Inc / 600 Polk Ave SW / Red Lake Falls, MN 56750